

NOTEBOOK

REFERENCEGUIDE



Contents

Chapter 1: About This Reference. 1

About this guide	2
Accessing your online User Guide	2
Gateway contact information	3
Gateway model and serial number	3
Microsoft Certificate of Authenticity	3
For more information	4

Chapter 2: Checking Out Your Notebook 5

Front	6
Left	7
Right	8
Back	9
Bottom	10
Keyboard area	11

Chapter 3: Setting Up and Getting Started . . 13

Working safely and comfortably	14
Reducing eye strain	14
Setting up your computer desk and chair	15
Sitting at your notebook	15
Avoiding discomfort and injury from repetitive strain	15
Connecting the AC adapter	16
Protecting from power source problems	18
Connecting the dial-up modem	19
Connecting to a broadband modem or network	20
Starting your notebook	20
Waking up your notebook	22
Turning off your notebook	22
Restarting (rebooting) your notebook	22
Using the status indicators	23
Using the keyboard	24
Key types	25
System key combinations	26

Programming the hotkey	29
Using the optional fingerprint reader	30
Running the TouchStrip Tutorial	30
Enrolling your fingerprints	31
Using the Fingerprint Control Center	33
Using the fingerprint reader features	34
Using the smart card reader	35
Using a privacy filter	35
Using the EZ Pad touchpad	36
Adjusting the brightness	38
Adjusting the volume	38
Turning your wireless radio on or off	39
IEEE 802.11 wireless network radio	39
Bluetooth radio	40

Chapter 4: Using Drives and Accessories..... 41

Changing modules	42
Using the CD or DVD drive	45
Identifying drive types	45
Using a CD or DVD	46
Using the memory card reader	47
Memory card types	47
Inserting a memory card	47
Using a memory card	47
Removing a memory card	48
Adding and removing a PC Card	48
Using a port replicator	49
Installing a printer or other peripheral device	50
Connecting a USB device	50
Connecting an IEEE 1394 device	51
Viewing the display on a projector or monitor	52
Viewing the display on a television	53
Ordering accessories	54

Chapter 5: Managing Power..... 57

Monitoring the battery charge	58
Recharging the battery(ies)	58

Changing batteries	59
Replacing the main battery	59
Installing a secondary battery	60
Recalibrating the battery(ies)	61
Extending battery life	62
Maximizing battery performance	62
Conserving battery power	62
Using alternate power sources	63
Changing power modes	63
Changing notebook power settings	64
Changing the power scheme	65
Changing alarm options	66
Changing advanced settings	67
Activating and using Hibernate mode	68

Chapter 6: Traveling with Your Notebook . . . 71

Packing your notebook	72
Traveling by air	72
Dial-up modem	72
Radio frequency wireless connections	73
Files	73
Security	74
Power	75
Additional tips	75

Chapter 7: Maintaining Your Notebook 77

Caring for your notebook	78
Cleaning your notebook	79
Cleaning the exterior	79
Cleaning the keyboard	79
Cleaning the notebook screen	80
Maintaining the battery(ies)	80
Storing batteries	81
Cleaning CDs or DVDs	81

Chapter 8: Upgrading Your Notebook. 83

Preventing static electricity discharge	84
Adding or replacing memory modules	85

Replacing the hard drive kit	89
------------------------------------	----

Chapter 9: Troubleshooting 95

Safety guidelines	96
First steps	96
Troubleshooting	97
Audio	97
Battery	97
CD drives	97
Diskette drive (modular or external)	98
Display	98
DVD drives	99
Ethernet	101
File management	101
Fingerprint reader	102
Hard drive	102
Internet	103
Keyboard	104
Media Center	105
Memory	108
Memory card reader	108
Modem (cable or DSL)	109
Modem (dial-up)	109
Mouse	112
Networks (wired)	113
Networks (wireless)	115
Passwords	117
PC Cards	118
Power	118
Printer	118
Sound	120
Status indicators	120
Touchpad	121
Video	121
Telephone support	122
Before calling Gateway Customer Care	122

Appendix A: Legal Information 123

Index..... 133

CHAPTER 1

About This Reference

- [About this guide](#)
- [Accessing your online User Guide](#)
- [Gateway contact information](#)
- [Microsoft Certificate of Authenticity](#)
- [For more information](#)

About this guide

This guide includes information and maintenance instructions that are specific to your model of Gateway notebook. For all other notebook information, see your online *User Guide*.

Accessing your online User Guide

In addition to this guide, your online *User Guide* has been included on your hard drive. Your *User Guide* is an in-depth, easy-to-read manual that includes information on the following topics:

- Help and technical support
 - Using and customizing Windows and other software
 - Using the Internet
 - Protecting your files
 - Playing and recording media
 - Networking
 - Maintenance and troubleshooting
- **To access your online *User Guide*:**
- Click **Start, All Programs**, then click **Gateway Documentation**.



Gateway contact information



Important

The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

Gateway model and serial number

The label on the bottom of your notebook contains information that identifies your notebook model and its features. Gateway Customer Care will need this information if you call for assistance.



Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the bottom of your notebook includes the product key code for your operating system.



For more information


For more information about your notebook, visit Gateway's *Support* page at www.gateway.com or the Web address shown on your notebook's label. The *Support* page also has links to additional Gateway documentation and detailed specifications.





CHAPTER2


Checking Out Your Notebook

- Front
- Left
- Right
- Back
- Bottom
- Keyboard area

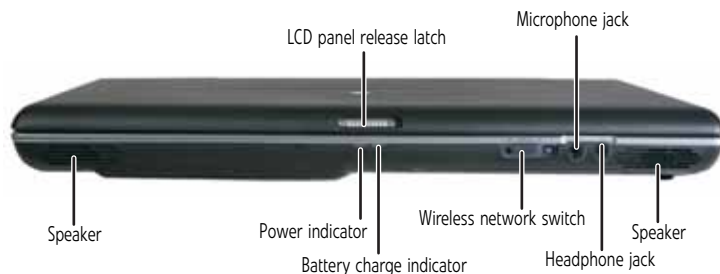
Front



 



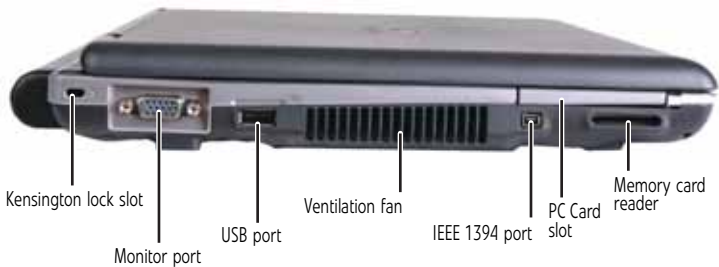

Component	Icon	Description
LCD panel release latch		Slide to open the LCD panel.
Microphone jack		Plug a microphone into this jack. The built-in microphone (see “ Keyboard area ” on page 11) is turned off while an external microphone is connected.
Speakers		Provide audio output when headphones or amplified speakers are not plugged in.
Power indicator		<ul style="list-style-type: none"> LED on - Notebook is on. LED blinking - Notebook is in Standby mode. LED off - Notebook is off.
Battery charge indicator		<ul style="list-style-type: none"> LED blue - Battery is fully charged. LED purple - Battery is charging. LED blinking red - Battery charge is very low. LED solid red - Battery is malfunctioning. <p>Important: This LED only lights up when your notebook is connected to AC power or the battery charge is very low.</p>
Wireless network switch		<p>Turn the optional IEEE 802.11 wireless network radio and optional Bluetooth radio on or off. For more information, see “Wireless Networking” in your online <i>User Guide</i>.</p> <p>Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 and Bluetooth communication devices are examples of devices that provide wireless communication.</p>

Component	Icon	Description
Headphone jack		Plug amplified speakers or headphones into this jack. The built-in speakers are turned off when speakers or headphones are plugged into this jack.

Left






Component	Icon	Description
Kensington™ lock slot		Secure your notebook to an object by connecting a Kensington cable lock to this slot.
Monitor port		Plug an analog VGA monitor or projector into this port. For more information, see “Viewing the display on a projector or monitor” on page 52.
USB port		Plug a USB device (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into this port.
Ventilation fan		Helps cool internal components. Warning: Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin. Caution: Do not block or insert objects into these slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook. Caution: Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.

Component	Icon	Description
IEEE 1394 port		Plug an IEEE 1394 (also known as Firewire® or i.Link®) device (such as a digital camcorder or MP3 player) into this 4-pin IEEE 1394 port.
PC Card slot		Insert one Type II PC Card into this slot. For more information, see “Adding and removing a PC Card” on page 48.
Memory card reader		Insert a memory card from a digital camera, MP3 player, PDA, or cellular telephone into the memory card reader. For more information, see “Using the memory card reader” on page 47. The memory card reader supports Memory Stick®, Memory Stick Pro®, Mini Secure Digital®, MultiMediaCard™, RS-MultiMediaCard™, Secure Digital™, and xD-Picture Card™ cards. Important: RS-Multimedia Card and Mini Secure Digital cards require the use of an adapter that is available with the media.

Right





Component	Icon	Description
USB ports		Plug USB devices (such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse) into these ports.
Smart card reader		Insert a smart card in this slot for enhanced security. For more information, see “Using the smart card reader” on page 35.

Component	Icon	Description
Modular bay		<p>Insert a module such as a CD drive, DVD drive, combination DVD/CD-RW drive, multi-format DVD±RW drive, diskette drive, a second hard drive, a secondary battery, or a weightsaver into this bay. For more information, see “Changing modules” on page 42.</p> <p>To determine the type of drive in the modular bay, examine the drive tray’s plastic cover and compare the logo to those listed in “Identifying drive types” on page 45.</p> <p>Important: To order a module other than the one that came with your notebook, contact Gateway.</p>
Modem jack		<p>Plug a dial-up modem cable into this jack. For more information, see “Connecting the dial-up modem” on page 19.</p>
Ethernet jack		<p>Plug an Ethernet network cable into this jack. Plug the other end of the cable into a cable modem, DSL modem, or an Ethernet network jack. For more information, see “Connecting to a broadband modem or network” on page 20.</p>




Back



Component	Icon	Description
Power connector		Plug the AC adapter cable into this connector.
S-Video out jack		Plug an S-Video device, such as a television, into this jack. For more information, see “Viewing the display on a television” on page 53 .

 

Bottom



Component	Icon	Description
Customer Care label		Includes the Customer Care contact information. For more information, see “Gateway contact information” on page 3 .
Modular bay latch		Slide to release the module. For more information, see “Changing modules” on page 42 .
Battery latch		Slide to release the main battery. For more information, see “Changing batteries” on page 59 .
Main battery		Provides power when the notebook is not plugged into AC power.
Battery lock		Slide to unlock the main battery. For more information, see “Changing batteries” on page 59 .
Docking port		Connect the optional port replicator to this port. Warning: Power is passed through this port. This docking connection is certified to UL 1950 for use only with port replicators designed for your Gateway notebook.
Memory bay/Hard drive bay		<ul style="list-style-type: none"> Install a memory module into this bay. For more information, see “Adding or replacing memory modules” on page 85. The hard drive is located in this bay. For more information, see “Replacing the hard drive kit” on page 89.

Keyboard area



Component	Icon	Description
Keyboard		Provides all the features of a full-sized, computer keyboard. For more information, see "Using the keyboard" on page 24 .
Status indicators		Inform you when a drive is in use or when a button has been pressed that affects how the keyboard is used. For more information, see "Using the status indicators" on page 23 .
Hotkey		Opens the Control Panel by default. You can program this button to start a different program. For more information, see "Programming the hotkey" on page 29 .
Microphone		Record audio through this microphone. This microphone is turned off while an external microphone is connected. For the location of your microphone jack, see "Front" on page 6 .
Power button		Press to turn the power on or off. You can also configure the power button for Standby/Resume mode. For more information on configuring the power button mode, see "Changing advanced settings" on page 67 .

Component	Icon	Description
Touchpad		Provides all the functionality of a mouse. For more information, see “Using the EZ Pad touchpad” on page 36 .
Fingerprint reader (optional)		Provides enhanced security. For more information, see “Using the optional fingerprint reader” on page 30 .

CHAPTER3

Setting Up and Getting Started

- Working safely and comfortably
- Connecting the AC adapter
- Connecting the dial-up modem
- Connecting to a broadband modem or network
- Starting your notebook
- Turning off your notebook
- Restarting (rebooting) your notebook
- Using the status indicators
- Using the keyboard
- Using the optional fingerprint reader
- Using the smart card reader
- Using the EZ Pad touchpad
- Adjusting the brightness
- Adjusting the volume
- Turning your wireless radio on or off

Working safely and comfortably

Before using your notebook, follow these general guidelines for setting up a safe and comfortable work area and avoiding discomfort and strain:

- Keep hands and arms parallel to the floor.
- Adjust the screen so it is perpendicular to your line of sight.
- Place your feet flat on the floor or on a footrest.
- Although notebooks are sometimes called “laptops,” do not use your notebook while it rests on your *unprotected* lap. Notebook operating temperatures can become quite high, increasing the risk of burns to your legs. Instead, use a laptop desk to protect your legs.
- Do not use the notebook on any soft, conforming surface, such as your lap, a blanket, carpet, or a sofa. Soft surfaces can block your notebook’s ventilation openings, leading to overheating, permanent damage to your notebook, and fire danger. Instead, place your notebook on a rigid, hard surface, and make sure that you keep the ventilation openings on the sides clear.



Warning

Do not use your notebook on a soft surface, such as your lap, a blanket, carpet, or a sofa. You must keep your notebook’s ventilation openings clear of obstructions, or your notebook may overheat, increasing the risk of fire and personal injury.

Reducing eye strain

Sunlight or bright indoor lighting should not reflect on the screen or shine directly into your eyes.

- Position the computer desk and screen so you can avoid glare on your screen and light shining directly into your eyes. Reduce glare by installing shades or curtains on windows, and by installing a glare screen filter.
- Use soft, indirect lighting in your work area. Do not use your notebook in a dark room.
- Avoid focusing your eyes on your screen for long periods of time. Every 10 or 15 minutes, look around the room, and try to focus on distant objects.
- Where feasible, keep your head vertical while looking at the screen. If you use an external keyboard, raise the notebook so the top of its screen is no higher than eye level.

Setting up your computer desk and chair

When you are setting up your computer desk and chair, make sure that the desk is the appropriate height and the chair helps you maintain good posture.

- Select a flat surface for your computer desk.
- Adjust the height of the computer desk so your hands and arms are positioned parallel to the floor when you use the keyboard and touchpad. If the desk is not adjustable or is too tall, consider using an adjustable chair to control your arm's height above the keyboard.
- Use an adjustable chair that is comfortable, distributes your weight evenly, and keeps your body relaxed.
- Position your chair so the keyboard is at or slightly below the level of your elbow. This position lets your shoulders relax while you type.
- Adjust the chair height, adjust the forward tilt of the seat, or use a footrest to distribute your weight evenly on the chair and relieve pressure on the back of your thighs.
- Adjust the back of the chair so it supports the lower curve of your spine. You can use a pillow or cushion to provide extra back support.

Sitting at your notebook

- Avoid bending, arching, or angling your wrists. Make sure that they are in a relaxed position when you type.
- Do not slouch forward or lean far back. Sit with your back straight so your knees, hips, and elbows form right angles when you work.
- Take breaks to stand and stretch your legs.
- Avoid twisting your torso or neck.

Avoiding discomfort and injury from repetitive strain

- Vary your activities to avoid excessive repetition.
- Take breaks to change your position, stretch your muscles, and relieve your eyes.
- Find ways to break up the work day, and schedule a variety of tasks.

Connecting the AC adapter

You can run your notebook using an AC adapter or your notebook's main and optional secondary batteries. The battery(ies) were shipped to you partially charged. You should use the AC adapter right away to fully charge the battery(ies). Allow three hours for the battery(ies) to fully charge.



Warning

Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or user-serviceable parts inside. The AC adapter has dangerous voltages that can cause serious injury or death. Contact Gateway about returning defective AC adapters.



Caution

Make sure that you use the AC adapter that came with your notebook or one of the same type purchased from Gateway. Replace the power cord if it becomes damaged. The replacement cord must be of the same type and voltage rating as the original cord or your notebook may be damaged.



Important

If the main and optional secondary batteries are not fully charged before you use your notebook on battery power for the first time, the battery life may be much shorter than you expect. If the battery life seems short even after being charged for three hours, the battery(ies) may need to be recalibrated. For information on recalibrating the battery(ies), see ["Recalibrating the battery\(ies\)" on page 61](#).

► To connect the AC adapter:

- 1 Connect the power cord to the AC adapter.



- 2 Connect the AC adapter to your notebook's power connector.



- 3 Plug the power cord into a wall outlet. The battery charge indicator turns on (see ["Front" on page 6](#) for the location of the battery charge indicator). If the battery charge indicator does not turn on, complete the following steps until it turns on:
 - a Unplug the adapter from your notebook, then plug it back in.
 - b Press **FN+F1** to toggle the status lights on and off.
 - c Make sure the power cord is firmly attached to the AC adapter.
 - d Plug the power cord into a different wall outlet.
- 4 When you finish using your notebook for the first time, turn off your notebook and leave your notebook connected to AC power until the battery charge indicator turns blue.



Important

If the battery charge indicator does not turn blue after three hours, contact Gateway Customer Care at the location shown on the Customer Care label. For more information, see ["Gateway contact information" on page 3](#).



Protecting from power source problems

During a power surge, the voltage level of electricity coming into your notebook can increase to levels far above normal levels and cause data loss or system damage. Protect your notebook and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your notebook.



Warning

High voltages can enter your notebook through both the power cord and the modem connection. To protect your notebook and avoid electrical shock, use a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

Connecting the dial-up modem


Your notebook has a built-in 56K modem that you can use to connect to a standard telephone line.



Warning

To reduce the risk of fire, use only No. 26 AWG or larger (for example, No. 24 AWG) UL-listed or CSA-certified telecommunication line cord for your dialup modem connection.

► To connect the modem:

- 1 Insert one end of the modem cable into the modem jack  on your notebook.



Tip

For the location of the modem jack on an optional port replicator, see the port replicator user guide.

- 2 Insert the other end of the modem cable into a telephone wall jack.



Important


The modem will not work with digital or PBX telephone lines.



Connecting to a broadband modem or network

Your notebook has a network jack that you can use to connect to a cable or DSL modem or to a wired Ethernet network.

► **To connect to a cable or DSL modem or to a wired Ethernet network:**

- 1 Insert one end of the network cable into the network jack  on your notebook.



Tip

For the location of the network jack on an optional port replicator, see the port replicator user guide.

- 2 Insert the other end of the network cable into a cable modem, DSL modem, or Ethernet network jack.



Starting your notebook



Warning

Do not work with the notebook resting on your lap. If the air vents are blocked, the notebook may become hot enough to harm your skin.



Caution

Provide adequate space around your notebook so air vents are not obstructed. Do not use the notebook on a bed, sofa, rug, or other similar surface.

► **To start your notebook:**

- 1 Slide the latch on the front of your notebook, then lift the LCD panel.

- 2 Press the power button located above the keyboard.

**Tip**

For more information about changing the power button mode, see ["Changing advanced settings" on page 67](#).

- 3 If you are starting your notebook for the first time, follow the on-screen instructions to select the language and time zone and to create your first user account.
- 4 Attach and turn on any peripheral devices, such as printers, scanners, speakers, and an optional port replicator.

**Tip**

For more information about connecting peripheral devices, see ["Installing a printer or other peripheral device" on page 50](#).

**Tip**

See the documentation that came with each device for its setup instructions.

- 5 To open the main menu, click **Start**. From that menu, you can run programs and search for files. For more information on using Windows, see "Using Windows" and "Customizing Your Notebook" in your online *User Guide*.



Waking up your notebook

When you have not used your notebook for several minutes or if you close the LCD panel without turning off your notebook, it may enter a power-saving mode called *Standby*. While in Standby mode, the power indicator flashes. If your notebook is in Standby mode, press the power button to “wake” it up.



Tip

For more information about Standby mode, see “[Changing power modes](#)” on page 63.

Turning off your notebook

► To turn off your notebook:

- 1 Click **Start**, then click **Turn Off Computer**. The *Turn Off Computer* dialog box opens.
- 2 Click **Turn Off**. Windows shuts down and turns off your notebook.



Important

If for some reason you cannot use the Turn Off option in Windows to turn off your notebook, press and hold the power button for about five seconds, then release it.



Restarting (rebooting) your notebook

If your notebook does not respond to keyboard, touchpad, or mouse input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your notebook to normal operation, you may have to restart (reboot) your notebook.

► To close unresponsive programs on your notebook:

- 1 Press **CTRL+ALT+DEL**. The *Windows Task Manager* dialog box opens.
- 2 Click the program that is not responding.
- 3 Click **End Task**.

- 4 Click **X** in the top-right corner of the *Windows Task Manager* dialog box.



Important

If your notebook does not turn off immediately, complete the following steps until the notebook turns off:

1. Press and hold the power button for about five seconds, then release it.
2. Unplug the power cord and remove the main and optional secondary batteries for more than 10 seconds.




Using the status indicators





Important

If none of the indicators are on, you may need to press FN+F1 to toggle the status indicators on.

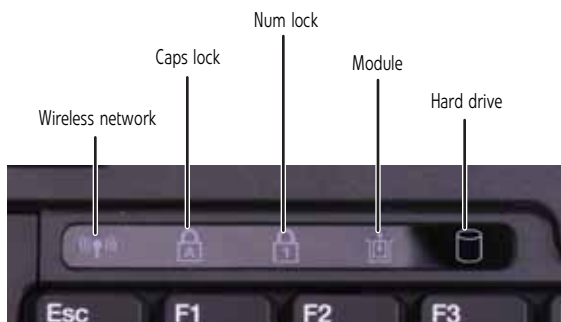Status indicators inform you when a drive is being used or when a button has been pressed that affects how the keyboard is used. The status indicators are located to the right of the keyboard.




Indicator	Icon	Description
Wireless network		<ul style="list-style-type: none"> ▪ LED on - Optional wireless IEEE 802.11 radio is turned on. ▪ LED off - Optional wireless IEEE 802.11 radio is turned off.
Caps lock		<ul style="list-style-type: none"> ▪ LED on - Caps lock is turned on. ▪ LED off - Caps lock is turned off.
Num lock		<ul style="list-style-type: none"> ▪ LED on - Numeric keypad is turned on. ▪ LED off - Numeric keypad is turned off.

Indicator	Icon	Description
Module		<ul style="list-style-type: none"> LED blue - Module is in use. LED solid purple - Module is ready to swap. LED flashing purple - Module is not installed in the notebook.
Hard drive		<ul style="list-style-type: none"> LED blinking - Hard drive is being accessed. LED off - Hard drive is not being accessed.

Using the keyboard

Your notebook features a full-size keyboard that functions the same as a desktop computer keyboard. Many of the keys have been assigned alternate functions, including shortcut keys for Windows, function keys for specific system operations, and the Num Lock keys for the numeric keypad.

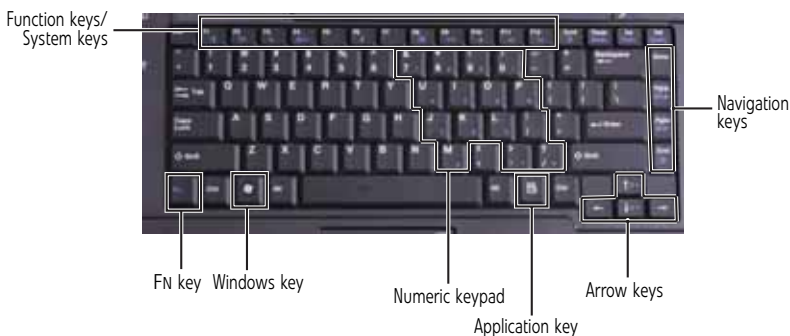




Tip

You can attach an external keyboard to the notebook or optional port replicator using a USB port. You do not need to shut down the notebook to connect a USB keyboard.





Key types

The keyboard has several different types of keys. Some keys perform specific actions when pressed alone and other actions when pressed in combination with another key.

Key type	Icon	Description
Function keys		Press these keys labeled F1 to F12 to perform actions in programs. For example, pressing F1 may open help. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
System keys		Press these colored keys in combination with the Fn key to perform specific actions. For more information, see "System key combinations" on page 26.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.
Fn key		Press the Fn key in combination with a colored system key to perform a specific action.
Windows key		Press this key to open the Windows Start menu. This key can also be used in combination with other keys to open utilities like F (Search utility), R (Run utility), and E (Explorer utility).
Numeric keypad		Use these keys to type numbers when the numeric keypad is turned on. Press Fn +  to turn on the numeric keypad.
Application key		Press this key for quick access to shortcut menus and help assistants in Windows.
Arrow keys		Press these keys to move the cursor up, down, right, or left.

System key combinations

When you press the **FN** key and a system key at the same time, your notebook performs the action identified by the text or icon on the key.

Press and hold FN , then press this system key...	To...
	Toggle the status indicators on or off. For more information, see “Using the status indicators” on page 23 .
	Turn the optional IEEE 802.11 wireless network radio on or off. For more information, see “Wireless Networking” in your online User Guide . Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 communication devices are examples of devices that provide wireless communication. Important: The wireless network switch must be in the ON position for this button to work. For more information, see “Front” on page 6 .
	Enter Standby mode. Press the power button to leave Standby mode. For more information, see “Changing notebook power settings” on page 64 .
	Toggle the notebook display in the following order: <ul style="list-style-type: none"> ▪ The LCD ▪ An external monitor or projector (a monitor or projector must be plugged into the monitor port on your notebook or optional port replicator or the DVI port on the optional port replicator) ▪ Both displays at the same time For more information, see “Viewing the display on a projector or monitor” on page 52 .

**Press and hold
FN, then press
this system key...**

To...

F6



Turn the optional Bluetooth radio on or off.

Warning: Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. Bluetooth communication devices are examples of devices that provide wireless communication.

Important: The wireless network switch must be in the ON position for this button to work. For more information, see ["Front" on page 6](#).

F8



Increase the LCD panel brightness above the normal brightest setting. Use this feature in bright lighting situations, such as outside in bright sunlight.

Press a second time to decrease the brightness below the normal lowest brightness setting. Use this feature in dim lighting situations.

Press a third time to return the display to the normal brightness setting.

Important: Using this feature will affect battery performance.

F9



Play or pause the CD or DVD.

F10



Stop playing the CD or DVD.

F11



Skip back one CD track or DVD chapter.

F12



Skip ahead one CD track or DVD chapter.

**Press and hold
FN, then press
this system key...**

To...



Increase the brightness of the display.



Decrease the brightness of the display.



Increase volume. For more information, see [“Adjusting the volume” on page 38](#).



Decrease volume. For more information, see [“Adjusting the volume” on page 38](#).




Mute the sound. Press the key combination again to restore the sound. For more information, see [“Adjusting the volume” on page 38](#).

Programming the hotkey

By default, the hotkey, located above the keyboard (see ["Keyboard area" on page 11](#)), opens up the Control Panel. You can select a different program for the button to open.

► **To program the hotkey:**

- 1 Click **Start, All Programs, Gateway**, then click **Gateway Hotkey Setup**. The *Keyboard Hotkey Setup* dialog box opens.

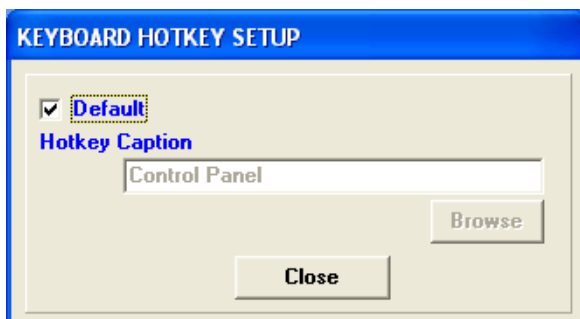

- 2 Click to uncheck the **Default** check box.



Tip

To have the hotkey open the *Control Panel*, click to select **Default**.

- 3 Click **Browse**. The *Open* dialog box opens.
- 4 Browse to the program you want to have the hotkey open, then click **Open**.
- 5 Click **Close**.



Using the optional fingerprint reader

Your notebook may include a fingerprint reader that provides enhanced security and convenience. The fingerprint reader is located between the left and right touchpad buttons.



Features include:

- Secure logon to Windows and fast user switching between user accounts
- Password bank feature which records and replays passwords used in Windows and Web-based applications.
- A *safe* or folder for storing encrypted files that only a user with a matching fingerprint can access
- Boot level security that requires a fingerprint authentication before the system will boot to Windows
- Scrolling so you can use the fingerprint reader in place of the touchpad.

Running the TouchStrip Tutorial

Before using the fingerprint reader the first time, you should run the TouchStrip Tutorial which teaches you the correct method to use the fingerprint reader.

► **To run the TouchStrip Tutorial:**

- 1 Click **Start, All Programs, Protector Suite QL**, then click **Fingerprint Tutorial**.
- 2 Click **Next** to proceed through the tutorial.



Enrolling your fingerprints

Before you can use the features of the fingerprint reader, you must enroll your fingerprints so your notebook can identify you.

► **To enroll your fingerprints:**

- 1 Click **Start, All Programs, Protector Suite QL**, then click **User Enrollment**. The *Welcome* screen opens.
- 2 Click **Next**. The *Finish* screen opens.
- 3 Select one of the following options, then click **Next**.
 - **Enrollment to the biometric device**—Select this option to save your fingerprint to memory in the fingerprint reader. Use this option to prevent unauthorized use of your notebook even if the hard drive has been removed.
 - **Enrollment to the hard disk**—Select this option to save your fingerprint to the hard drive. If you plan to enroll more than 21 fingerprints, you must select this option.


The *User Enrollment* wizard opens.



- 4 If you want to run the TouchStrip Tutorial, leave the **Run interactive tutorial** check box selected, then click **Next**. The *TouchStrip Tutorial* runs. For more information, see [“Running the TouchStrip Tutorial” on page 30](#). After you have completed the tutorial, the *Enrollment* screen appears.

-OR-

If you do not want to run the *TouchStrip Tutorial*, click to uncheck the **Run interactive tutorial** check box, then click **Next**. The *Enrollment* screen appears.

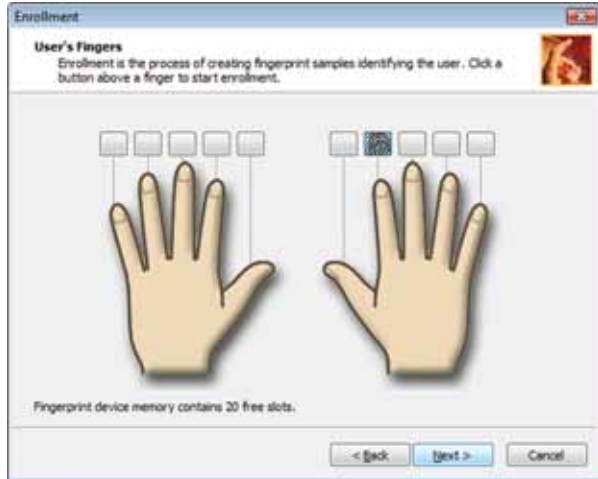


- 5 Click the button above the finger you are enrolling. A new box appears with three empty circles in it.



- 6 Swipe your finger. A sample will be created and is indicated by a fingerprint icon in one of the circles.



- 7 Repeat [Step 6](#) two more times, then click **Next**. The *Advanced Security* screen appears.

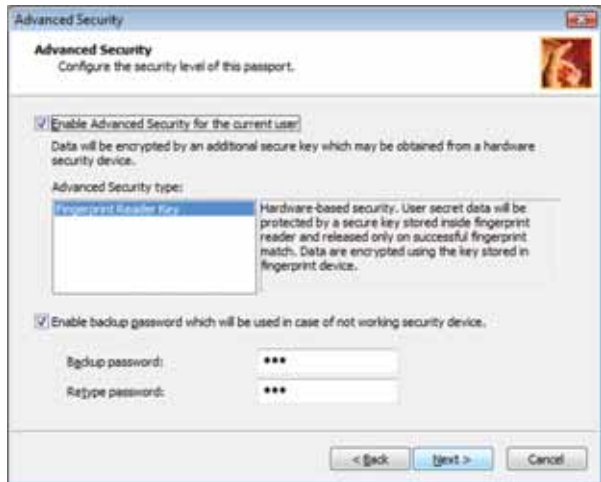

- 8 Type a password in the **Backup password** box, type the same password in the **Retype password** box, then click **Next**.
- 9 Click **Finish**.



Using the Fingerprint Control Center

The Fingerprint Control Center lets the administrator of the notebook control how the fingerprint reader is used. You can:

- Add new fingerprints to the database
- Edit or delete fingerprints from the database
- Modify how fingerprints are used for logging onto the notebook.
- Modify how the fingerprint reader is used for scrolling.

► **To use the Fingerprint Control Center:**

- 1 Click **Start, All Programs, Protector Suite QL**, then click **Control Center**. The *Fingerprint Control Center* opens.



- 2 Click the yellow arrow in front of an option, then click the option or setting you want to change.



Using the fingerprint reader features

For more information about the fingerprint reader and how to use its features, click **Start, All Programs, Protector Suite QL**, then click **Help**.

Using the smart card reader

Your notebook includes a smart card reader that provides enhanced log-on security. A smart card is a plastic card similar to an ATM card. Insert the card into the smart card reader, then enter a personal identification number (PIN) to log onto the notebook or the network. Smart cards are typically used by large corporations for security.

► **To insert a smart card:**

- Insert the smart card into the smart card slot with the magnetic stripe up and to the front of the notebook.




Using a privacy filter


Your notebook's LCD screen has been specially made to hold privacy filters. A privacy filter helps block the screen view from anyone viewing the notebook screen from a side view. For more information about getting a privacy filter, see ["Ordering accessories" on page 54](#). To attach a privacy filter to your notebook, see the installation instructions that come with the privacy filter.

Using the EZ Pad touchpad

The EZ Pad™ consists of a touchpad, two buttons, and a scroll zone.

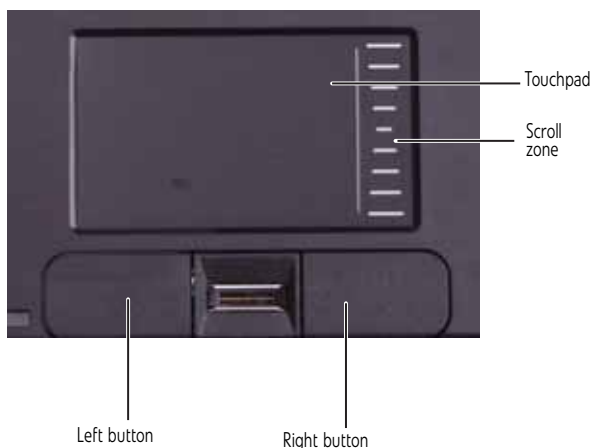

When you move your finger on the touchpad, the *pointer* (arrow) on the screen moves in the same direction. You can use the scroll zone to scroll through documents. Use of the scroll zone may vary from program to program.

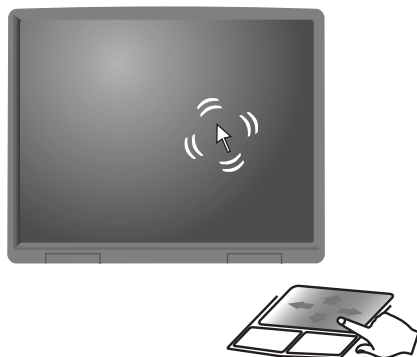

You can use the EZ Pad *left* and *right* buttons below the touchpad to select objects.



Tip

You can attach a mouse to the notebook or optional port replicator using a USB port. You do not need to shut down the notebook to connect a USB mouse.



Tip

For instructions on how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other touchpad settings, see "Changing the mouse, touchpad, or pointing device settings" in your online *User Guide*.



Tip

You may have received your notebook with the EZ Pad touchpad set to only accept clicking by using the touchpad buttons. You can change this feature to allow tapping on the touchpad to simulate clicking the left button. For more information, see "Changing the mouse, touchpad, or pointing device settings" in your online *User Guide*.

To...


Do this...

Move the pointer on the screen.




Move your finger around on the touchpad. If you run out of space and need to move the pointer farther, lift your finger, move it to the middle of the touchpad, then continue moving your finger.

Select an object on the screen.

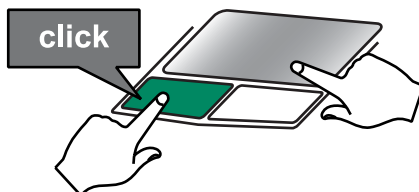

Position the pointer over the object. Quickly press and release the left button once. This action is called *clicking*.


Start a program or open a file or folder.

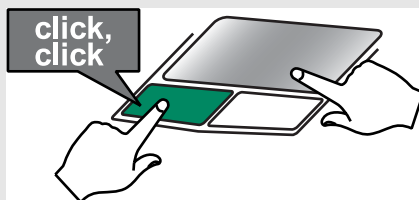

Position the pointer over the object. Press the left button twice in rapid succession. This action is called *double-clicking*.


To...**Do this...**

Access a shortcut menu or find more information about an object on the screen.

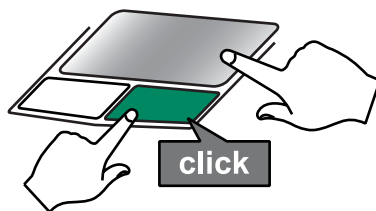

Position the pointer over the object. Quickly press and release the right button once. This action is called *right-clicking*.

Move an object on the screen.

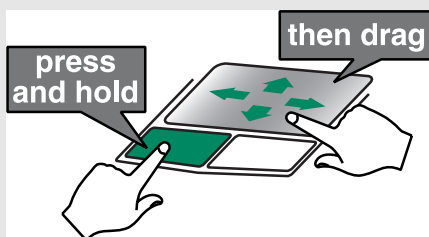

Position the pointer over the object. Press the left button and hold it down, then use the touchpad to move (drag) the object to the appropriate part of the screen. Release the button to drop the object where you want it.

Adjusting the brightness

► **To adjust screen brightness:**

- Use the increase brightness and decrease brightness keys on the keyboard. For more information, see ["System key combinations" on page 26](#).



Adjusting the volume

You can use the volume control to adjust the overall volume of your notebook.

► **To adjust the overall volume level using hardware controls:**

- If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see [“System key combinations” on page 26.](#)



Tip

For instructions on how to adjust the volume in Windows, see “Adjusting the Volume” in your online *User Guide*.

Turning your wireless radio on or off

Your Gateway notebook may have a factory-installed wireless radio.



Warning

Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 communication devices are examples of devices that provide wireless communication.




Warning

In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, hospitals, and oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to using or turning on the wireless device.

IEEE 802.11 wireless network radio

Your notebook may have an IEEE 802.11 radio for communicating with other computers on a wireless Ethernet network.

► **To turn the wireless IEEE 802.11 radio on:**

- 1 Slide the wireless network switch  to the ON position. For the location of the wireless network switch, see [“Front” on page 6.](#)


- 2 Press **FN + F2**. The wireless status indicator turns on. For the location of the wireless status indicator, see [“Using the status indicators” on page 23](#).



► **To turn the wireless IEEE 802.11 radio off:**

- Press **FN + F2**. The wireless status indicator turns off. For the location of the wireless status indicator, see [“Using the status indicators” on page 23](#).

-OR-

Slide the wireless network switch  to the OFF position to turn both IEEE 802.11 and Bluetooth off. For the location of the wireless network switch, see [“Front” on page 6](#).




Tip

For more information about using your notebook on a wireless network, see “Wireless Networking” in your online *User Guide*.

Bluetooth radio

Your notebook may have a Bluetooth radio for communicating with another Bluetooth device, such as a printer, scanner, camera, MP3 player, headphone, keyboard, or mouse.

► **To turn the Bluetooth radio on:**

- 1 Slide the wireless network switch  to the ON position. For the location of the wireless network switch, see [“Front” on page 6](#).


- 2 Press **FN + F6**.



► **To turn the wireless Bluetooth radio off:**

- Press **FN + F6**.

-OR-

Slide the wireless network switch  to the OFF position to turn both IEEE 802.11 and Bluetooth off. For the location of the wireless network switch, see [“Front” on page 6](#).



Help

For more information about Bluetooth, click **Start, All Programs, My Bluetooth Places**. When the *My Bluetooth Places* window opens, click **Help**, then click **Bluetooth Help Topics**.


CHAPTER 4

Using Drives and Accessories

- Changing modules
- Using the CD or DVD drive
- Using the memory card reader
- Adding and removing a PC Card
- Using a port replicator
- Installing a printer or other peripheral device
- Viewing the display on a projector or monitor
- Viewing the display on a television
- Ordering accessories

Changing modules

Your notebook's modular bay supports different *bay modules*, such as a CD drive, DVD drive, combination DVD/CD-RW drive, DVD±RW drive, a second hard drive, a diskette drive, a secondary battery, or a weightsaver.

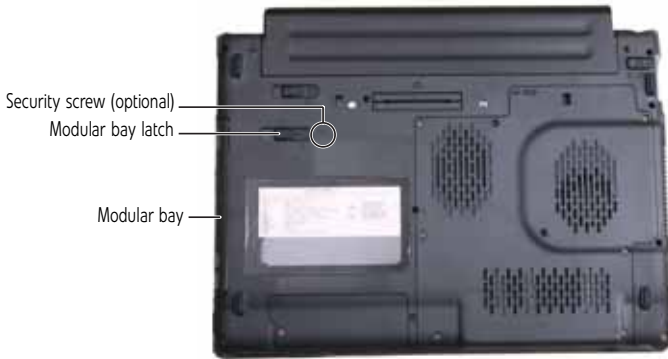

► To change bay modules:

- 1 If you are removing a drive, make sure that there is no disc in it.
- 2 Make sure that the notebook is not in Standby or Hibernate mode.



Caution

Turn off your notebook if you are removing the optional secondary battery and the notebook does not have a charged main battery and is not directly connected to AC power.


- 3 Close the LCD panel.
- 4 Disconnect your notebook from the optional port replicator.
- 5 Turn your notebook over so the bottom is facing up.

- 6 Remove the optional security screw if your notebook has one.

Security screw (optional)



- 7 Slide the bay module release latch. The module moves out slightly.

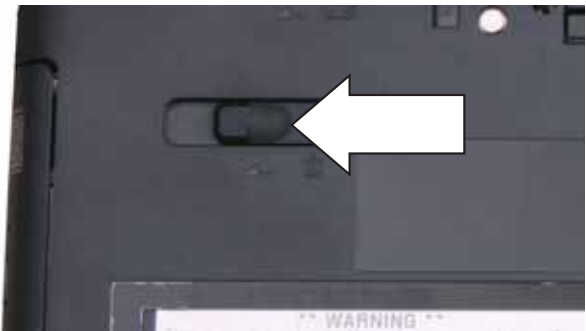

- 8** Slide the bay module out.



- 9** Firmly push the new bay module straight into the bay until the latch clicks into place.
- 10** Reinstall the optional security screw if your notebook has one.
- 11** Connect the optional port replicator.

Using the CD or DVD drive

You can use your notebook to enjoy a wide variety of multimedia features.

Identifying drive types

Your Gateway notebook may contain one of the following drive types. Look on the front of the drive for one or more of the following logos:

If your drive has this logo...	This is your drive type...	Use your drive for...
	CD drive	Installing programs, playing audio CDs, and accessing data. You cannot use this drive to create CDs or DVDs or play DVDs.
	DVD drive	Installing programs, playing audio CDs, playing DVDs, and accessing data. You cannot use this drive to create CDs or DVDs.
	Combination DVD/CD-RW drive	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording music and data to recordable CDs. You cannot use this drive to create DVDs.
	Multi-format double layer DVD±RW drive	<p>Installing programs, playing audio CDs, playing DVDs, accessing data, recording music and data to CD-R or CD-RW discs, and recording video and data to DVD-R, DVD+R, DVD-RW, DVD+RW, or double layer DVD+R or DVD-R discs.</p> <p>Note: To use the double layer capability of the double layer recordable DVD drive, the blank DVDs you purchase must state Double Layer, Dual Layer, or DL. Using other types of blank media will result in less capacity.</p>

Using a CD or DVD



Important

DVD discs and drives contain regional codes that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc's regional code and your DVD drive's regional code must match.

The regional code on your DVD drive is determined by your notebook's delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive's regional code must match the regional code of the disc. The regional code for the disc is on the disc, disc documentation, or packaging.



Important

When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

► To insert a CD or DVD:

- 1 Press the eject button on the CD or DVD drive. After the tray opens slightly, pull the disc tray completely open.
- 2 Place the disc in the tray with the label facing up, then press down carefully on the disc until it snaps into place.
- 3 Push the tray in until it is closed.



Tip

For information about cleaning a CD or DVD, see [“Cleaning CDs or DVDs” on page 81](#).

Using the memory card reader

You can use memory cards to transfer pictures from a digital camera to your notebook. You can also use the memory card reader to transfer data between your notebook and a device that uses memory cards, such as a PDA, MP3 player, or cellular telephone.

Memory card types

The memory card reader supports Memory Stick®, Memory Stick Pro®, MultiMediaCard™, Secure Digital™, Mini Secure Digital™, RS-MultiMediaCard™, and xD-Picture Card™.



Important

RS-Multimedia Card and Mini Secure Digital cards require the use of an adapter that is available with the media.

Inserting a memory card

► To insert a memory card:

- Insert the memory card into the memory card slot with the label facing up and the arrow on the label pointing towards the notebook.



Using a memory card

► To access a file on a memory card:

- 1 Click **Start**, then click **My Computer**.
- 2 Double-click the drive letter (for example, the E: drive), then double-click the file name.



Removing a memory card



Important

Do not use the remove hardware  icon in the taskbar to remove the memory card. If you use the remove hardware icon, your notebook may not recognize your memory card reader until you restart your notebook.

► To remove a memory card:

- 1 Push the memory card into the notebook. The memory card pops out slightly.
- 2 Pull the memory card out of the notebook.



Adding and removing a PC Card

Your notebook has a PC Card slot (also known as a PCMCIA card slot). This slot accepts one Type II card. You do not need to restart your notebook when changing most cards because your notebook supports *hot-swapping*. Hot-swapping means that you can insert a PC Card while your notebook is running. If your PC Card does not work after hot-swapping, see the PC Card manufacturer's documentation for further information.

► To insert a PC Card:

- Push the card firmly into the PC Card slot, label-side up, until the outer edge of the card is flush with the side of your notebook.



► **To remove a PC Card:**


- 1 Click the remove hardware  icon in the taskbar, the PC Card name, then click **Stop**.

-OR-

Turn off your notebook.



Important

If the remove hardware icon does not appear on the taskbar, click the show hidden icons  button.

- 2 Release the eject button by pressing the PC Card eject button once.
- 3 Eject the PC Card by pressing the eject button again.



Using a port replicator

Although you can attach devices directly to your notebook, a port replicator lets you make all of those connections at one time. When you travel with your notebook, you merely disconnect from the port replicator instead of unplugging all the devices.

A port replicator also provides additional ports and other expansion features not included with your notebook. For more information about using a port replicator, see the port replicator user guide.

Installing a printer or other peripheral device

Your notebook or optional port replicator has one or more of the following ports: IEEE 1394 (also known as Firewire® or i.Link®), Universal Serial Bus (USB), S-Video (analog video), DVI (digital video), and S/PDIF (digital audio). You use these ports to connect peripheral devices such as printers, scanners, and digital cameras to your notebook.



Important

Before you install a printer, scanner, or other peripheral device, see the device documentation and installation instructions.

IEEE 1394 and USB ports support *plug-and-play* and *hot swapping*, which means that your notebook will usually recognize such a device whenever you plug it into the appropriate port. When you use an IEEE 1394 or USB device for the first time, your notebook will prompt you to install any software the device needs. After doing this, you can disconnect and reconnect the device at any time.



Help

For more information about installing peripheral devices, click **Start**, then click **Help and Support**. Type the keyword **installing devices** in the **Search** box, then press **ENTER**.

Connecting a USB device

Your notebook has USB ports for connecting devices such as a diskette drive, flash drive, printer, scanner, camera, keyboard, or mouse.



Important


USB devices may have special installation instructions. See your USB device's installation guide.



Important

For more information about using the USB port on your device, see your device's documentation.

► **To connect your USB device to your notebook:**

- 1 Connect one end of the USB cable to your device.
- 2 Connect the other end of the cable to a USB port  on your notebook.



Tip

For the location of the USB ports on your notebook, see [“Left” on page 7](#) and [“Right” on page 8](#). For the location of the USB ports on an optional port replicator, see the port replicator user guide.



Connecting an IEEE 1394 device


Your notebook has a 4-pin IEEE 1394 port (also known as a Firewire® or i.Link® port) for connecting devices such as a video camera.



Important

For more information about using the IEEE 1394 port on your device, see your device's documentation.

► **To connect your IEEE 1394 device to your notebook:**

- 1 Connect one end of the IEEE 1394 cable to your IEEE 1394 device.
- 2 Connect the other end of the cable to the IEEE 1394 port  on your notebook.



Tip

For the location of the IEEE 1394 port on an optional port replicator, see the port replicator user guide.



Tip


For more information about editing video, see [“Creating a video DVD”](#) in your online *User Guide*.



Viewing the display on a projector or monitor

You can use your notebook for giving presentations by connecting an external monitor or projector to your monitor (VGA) port. In addition, if you have the optional port replicator, you can connect a monitor or projector using a DVI port. Your notebook supports simultaneous LCD and external display. Simultaneous display lets you control the presentation from your notebook at the same time as you face your audience.

► **To use a projector or external monitor:**

- 1 Turn off your notebook.
- 2 Plug the projector or monitor cable into the monitor port  on your notebook or optional port replicator.



Tip

For the location of the monitor port on an optional port replicator, see the port replicator user guide.

- 3 Turn on your notebook.
- 4 Plug the projector's or monitor's power cord into an AC power source and turn it on.
Windows recognizes the new hardware and the *New Display Detected* dialog box opens.
- 5 Right-click any empty space on the desktop, then click **Properties**. The *Display Properties* dialog box opens.
- 6 Click the **Settings** tab.
- 7 Right-click the second monitor icon (labeled 2), then click **Attached**.
- 8 Click **Apply**.
- 9 Adjust properties such as **Screen Resolution** or **Color Quality** if necessary.
- 10 Click **OK**.

- 11** Press **Fn+F4** to switch between viewing the display on the LCD panel, viewing the display on the projector or monitor, and viewing the display on both the display and the projector or monitor.



Important

If an external monitor or projector is connected and you close the LCD panel, your notebook may turn off the LCD panel, but will not enter Standby mode.



Viewing the display on a television

The S-Video out jack on your notebook lets you view your notebook display on a television screen using a standard S-Video cable.



Important

To turn on external video by default, connect the television (or other external video device) before starting your notebook.



Important


Audio is not transmitted through an S-Video out jack. Use the built-in speakers or a set of headphones or external powered speakers, or connect your notebook to a stereo system using the headphone jack to hear sound while playing a DVD. DVD playback to a VCR will be scrambled by copyright protection software.



Tip

Many newer televisions have a VGA or DVI port. For the best picture quality possible, use the VGA or DVI port instead of the S-Video jack. For more information, see ["Viewing the display on a projector or monitor" on page 52.](#)

► **To view your notebook display on a television:**

- 1 With your notebook off, connect one end of a standard S-Video cable to the S-Video out jack  on your notebook.



Tip

For the location of the S-Video out jack on an optional port replicator, see the port replicator user guide.

- 2 Connect the other end of the cable to the Video in jack on your television or VCR.
- 3 Turn on the television or VCR.
- 4 Start your notebook.



Tip

If you are traveling internationally, you may need to change the video standard. For example, many televisions in Asia use PAL instead of NTSC.



Tip

DVI video output is only available by using the optional port replicator.

Ordering accessories

To order accessories, visit www.gateway.com. Accessories may not be available in all localities.

Automobile/airplane power adapters

With an automobile/airplane power adapter, you can save battery power by plugging your notebook into an automobile cigarette lighter or an airplane in-flight power receptacle.

Batteries

If you run your notebook on battery power for extended periods, you may want to buy an additional main battery or a secondary battery so you can swap batteries when necessary. See [“Changing batteries” on page 59](#) for more information about using an additional battery.

Bay modules

Your notebook’s modular bay supports different *bay modules*, such as a CD drive, DVD drive, combination DVD/CD-RW drive, DVD±RW drive, a second hard drive, a diskette drive, a secondary battery, or a weightsaver. A weightsaver is a device designed to reduce the weight of your notebook. See [“Changing modules” on page 42](#) for more information.

Carrying cases

Gateway has large-capacity carrying cases if you need additional space for accessories or supplies.

Hard drives

If you want to increase your internal storage space, try replacing your existing hard drive with a larger drive. See [“Replacing the hard drive kit” on page 89](#) for more information.

Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory. See [“Adding or replacing memory modules” on page 85](#) for more information.

Port replicators

Although you can attach devices directly to your notebook, a port replicator lets you make all of those connections at one time. When you travel with your notebook, you merely disconnect from the port replicator instead of unplugging all the devices.

A port replicator also provides additional ports and other expansion features not included with your notebook. See the user guide for the port replicator for more information about using a port replicator with your notebook.

Printers

You can attach almost any type of printer to your notebook. The most common types are inkjet and laser printers, which print in color or black and white.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.

Privacy filter

A privacy filter helps block the screen view from anyone viewing the notebook screen from a side view. Your notebook's LCD screen has been specially made to hold privacy filters.

USB flash drive

Use a USB flash drive for storing files or transferring files to another computer.

CHAPTER 5



Managing Power

- Monitoring the battery charge
- Recharging the battery(ies)
- Recalibrating the battery(ies)
- Extending battery life
- Changing notebook power settings

Monitoring the battery charge

Your new Gateway notebook is designed to provide an exceptional balance of performance and portability. Your notebook uses the latest chipset and mobile processor technologies to manage the processor speed and power consumption for a greater battery life experience. This design provides you with maximum performance when plugged into AC power balanced with optimized battery life when on battery power.

Closely monitor the battery charge. When the battery charge gets low, change the main or optional secondary battery or connect to AC power immediately to prevent losing any unsaved work. To monitor the battery charge:

- Double-click the power cord icon  or battery icon  in the taskbar. The *Power Meter* dialog box opens.



Important

If the power cord or battery icon does not appear on the taskbar, click the show hidden icons  button. If the icon still does not appear, make sure that Always show icon on the taskbar is checked on the Advance tab in the *Power Options Properties* dialog box. For more information, see ["Changing advanced settings" on page 67](#)

- Look at the battery charge status indicator.
- Wait for a Low Battery warning message to appear.

If your battery charge indicator displays what looks like an inaccurate charge, you may need to recalibrate the battery(ies).



Tip

For more information about the battery charge status indicator, see ["Front" on page 6](#).



Tip

For more information about recalibrating the battery(ies), see ["Recalibrating the battery\(ies\)" on page 61](#).

Recharging the battery(ies)

The battery(ies) recharge while they are installed and your notebook is connected to AC power. While the battery(ies) recharge, the battery charge indicator turns on.

Changing batteries

Replacing the main battery



Warning

Danger of explosion if battery is incorrectly replaced.

Replace only with a battery specifically manufactured for your Gateway notebook. Discard used batteries according to local hazardous material regulations.

The batteries used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used batteries promptly. Keep away from children.



Caution

If your notebook is connected to AC power, or if it has a charged secondary battery installed, you can change the main battery while the notebook is turned on. If your notebook has only a main battery and it is not plugged into an AC outlet, you must turn the notebook off while changing the battery.

► To replace the main battery:

- 1 Disconnect your notebook from the optional port replicator.
- 2 If your notebook is on and is connected to AC power or has a charged secondary battery installed, go to [Step 3](#).

-OR-

If your notebook is on, is not plugged into an AC outlet, and does not have a charged secondary battery installed, save your work and turn off the notebook.

- 3 Turn your notebook over so the bottom is facing up.
- 4 Slide the battery lock to the unlocked position, then slide the battery release latch.



- 5 Slide the battery out of the notebook.



- 6 Slide a recharged battery into the notebook until it snaps into place.
- 7 Slide the battery lock to the locked position.
- 8 Turn your notebook over.
- 9 Open the LCD panel.



Installing a secondary battery



Warning

Danger of explosion if battery is incorrectly replaced.

Replace only with a battery specifically manufactured for your Gateway notebook. Discard used batteries according to local hazardous material regulations.

The batteries used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 212°F (100°C), or incinerate. Dispose of used batteries promptly. Keep away from children.

Your notebook's modular bay accepts a secondary battery. The secondary battery charges when the notebook is connected to AC power.

► To install a secondary battery:

- Swap the secondary battery for a bay module by following the instructions in ["Changing modules" on page 42](#).



Recalibrating the battery(ies)



Important

Do not interrupt the battery recalibration process. If recalibration is interrupted, you must start the process over again.

If your notebook unexpectedly goes into Standby mode while you are using it but the battery charge is not low, you may need to recalibrate your battery(ies). You should also recalibrate the battery(ies) periodically to maintain the accuracy of the battery gauges.

► To recalibrate the battery(ies):

- 1 Connect the AC adapter, then turn on your notebook.
- 2 As soon as it starts and you see a startup screen, press **F2**. The BIOS Setup utility opens.
- 3 Open the **Advanced** menu.
- 4 Highlight **Battery Auto Learning**, then select **Enabled** by pressing the spacebar.
- 5 Open the **Exit** menu, highlight **Exit Saving Changes**, then press **ENTER**.
- 6 Select **Yes**, then press **ENTER**.

The battery recalibration process begins and a screen opens showing you the progress. The entire process takes several hours.

When the recalibration has finished, the message "Press [Esc] key to exit" appears.

- 7 Press **Esc**. The battery charge indicator now displays an accurate battery charge.



Important

If, after completing this procedure, the battery charge indicator still does not show an accurate charge, contact Gateway Customer Care at the location shown on the Customer Care label. For more information, see ["Gateway contact information" on page 3](#).

Extending battery life

Maximizing battery performance

To get maximum performance from your notebook battery(ies), we recommend that you initially condition (fully charge and discharge) your new battery(ies) a few times during the first several weeks of use, to let them reach their maximum rated capacity.

Over the long term, use the battery(ies) at least once a month, even if they were kept in a cool, dry place for storage, but avoid **frequent** full discharges because this puts additional strain on the battery(ies). Several partial discharges with frequent recharges are better for a lithium-ion battery than one complete discharge, and recharging a partially charged lithium-ion battery does not cause harm because there is no memory.

Conserving battery power

To conserve power while using the battery(ies) to power your notebook:

- Turn off wireless networking and Bluetooth.
- Dim the display as low as is comfortable.
- Disconnect all external devices, like IEEE 1394 and USB devices.
- Remove PC Cards when you do not need them. Many PC Cards use a small amount of power while inserted, even if they are not being used.
- Close the LCD panel to turn off the display while you are not using your notebook. The display stays off until you open the panel again.
- Use Hibernate mode for maximum power savings while your notebook is not in use.



Tip

For more information about using Hibernate mode, see [“Traveling with Your Notebook” on page 71](#).

- Use the notebook touchpad instead of an external mouse.
- Decrease or mute speaker volume.
- Turn off all scheduled tasks.

- Turn off auto-save features in Microsoft Office and other applications.
- Copy programs from CDs or DVDs to the hard drive so you do not use battery power by running optical drives.
- Use the CD or DVD drive only when necessary. This drive uses a large amount of power.
- Recharge the battery(ies) often, take an extra battery, and fully recharge the batteries before traveling. For more information, see [“Recharging the battery\(ies\)” on page 58.](#)

**Tip**

For more information about traveling with your notebook, see [“Traveling with Your Notebook” on page 71.](#)

Using alternate power sources

To extend battery life, use alternate power sources whenever possible.

- If traveling internationally, take electrical adapters. Save the battery(ies) for times when you cannot use a power adapter. If you plan on taking your AC power adapter, also take a single-plug surge protector.
- If you will have access to an EmPower™ in-flight power receptacle, an automobile power outlet, or an automobile cigarette lighter, use an airplane/ automobile power adapter or power inverter. Save the battery(ies) for times when you cannot use a power adapter.
- To find AC power outlets in airports, look for them next to support pillars, in large areas such as boarding gates, and under banks of telephones.

Changing power modes

You can use the following power modes to lengthen the life of your notebook's battery(ies):

- *Standby* - while your notebook is in Standby mode, it switches to a low power state where devices, such as the display and drives, turn off.

- *Hibernate* - (also called *save to disk*) writes all current memory (RAM) information to the hard drive, then turns your notebook completely off. The next time you turn on your notebook, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode.

Using power saving modes

Always save your work before using Standby mode. In Standby mode, your notebook reduces or turns off the power to most devices except memory. However, the information in memory is not saved to the hard drive. If power is interrupted, the information is lost.

When in Hibernate mode, your notebook saves all memory information to the hard drive, then turns the power completely off.

If your notebook is...	...and you want to...	...then
On	Enter Standby mode	Press FN+F3 .
On	Enter Hibernate mode	Click Start , then click Turn Off Computer . Press and hold SHIFT , then click Hibernate .
In Standby or Hibernate mode	Exit Standby or Hibernate mode	Press the power button.

Changing notebook power settings

You can change the function of your notebook's power button, Standby system key, and power-saving timers by changing power settings on your notebook.

You can customize power settings from the Windows Control Panel by selecting power schemes, setting power alarms, adjusting advanced power settings, and activating Hibernate mode.

Changing the power scheme

Power schemes (groups of power settings) let you change power saving options such as when the display or hard drive is automatically turned off. You can select one of the defined power schemes or create a custom power scheme.

The processor installed in your notebook may use technology to conserve battery power. This processor can change its operating speed according to the power source. Your notebook's default settings operate the processor at full speed while connected to AC power and at reduced speed (which uses less power) while using battery power.

Help

For more information about changing the power scheme, click **Start**, then click **Help and Support**. Type the keyword **power scheme** in the **Search** box, then press **ENTER**.

► To change the power scheme:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**.
- 2 Click/Double-click the **Power Options** icon. The *Power Options Properties* dialog box opens.



- 3 Click the arrow button to open the **Power Schemes** list, then click the power scheme you want.

- OR -

Set the timers, then click **Save As** and type a name for the scheme.

- 4 Click **OK**.



Changing alarm options

Alarms can alert you when the battery charge is low.




Help

For more information about changing the alarm options, click **Start**, then click **Help and Support**. Type the keyword **alarm options** in the **Search** box, then press **ENTER**.

► To change the alarm options:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**.
- 2 Click/Double-click the **Power Options** icon. The *Power Options Properties* dialog box opens.
- 3 Click the **Alarms** tab.

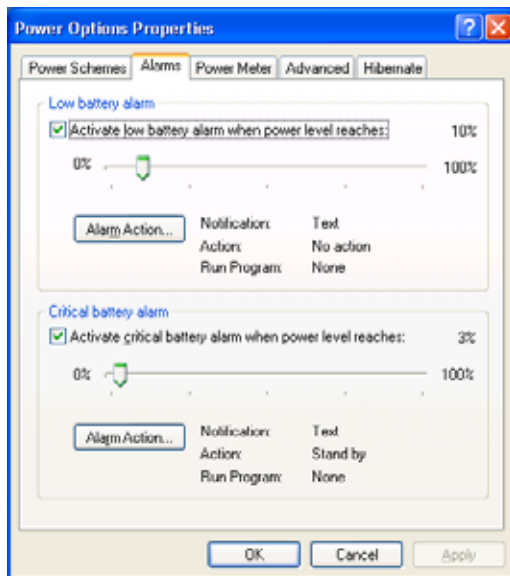

- 4 Adjust the alarm settings, then click **OK**.



Changing advanced settings


Advanced power settings let you assign different power saving modes to the power button and Standby system key. You can also select which power saving mode is activated when you close the LCD panel.

Help

For more information about changing the power management settings, click **Start**, then click **Help and Support**. Type the keyword **power management** in the **Search** box, then press ENTER.

► To change advanced power management settings:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**.
- 2 Click/Double-click the **Power Options** icon. The *Power Options Properties* dialog box opens.
- 3 Click the **Advanced** tab.

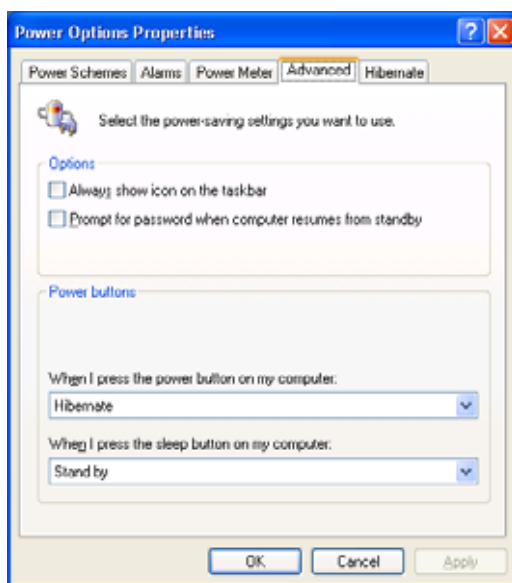

- 4 Click the arrow button to open a **Power buttons** list, then click the power setting mode you want to use.
- 5 Click **OK**.



Activating and using Hibernate mode

Hibernate (also called *save to disk*) writes all current memory (RAM) information to the hard drive, then turns your notebook completely off. The next time you turn on your notebook, it reads the memory information from the hard drive and opens the programs and documents that were open when you activated Hibernate mode.




Help

For more information about using Hibernate mode, click **Start**, then click **Help and Support**. Type the keyword **hibernate** in the **Search** box, then press ENTER.

► To activate Hibernate mode:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**.
- 2 Click/Double-click the **Power Options** icon. The *Power Options Properties* dialog box opens.
- 3 Click the **Hibernate** tab.

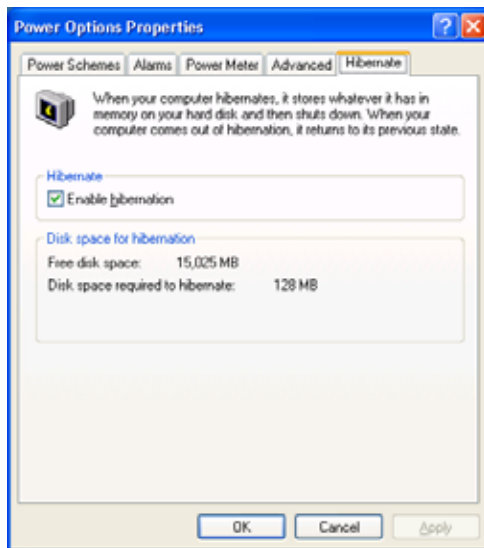

- 4 Click the **Enable hibernation** check box, then click **Apply**. *Hibernate* mode is now an option you can select on the Advanced tab in the **Power Options Properties** dialog box and in the *Shut Down Windows* dialog box.



► **To use Hibernate mode:**

- As an automatic power savings mode:

Open the *Power Options Properties* dialog box, then click the **Power Schemes** tab. Click the arrow button to open a **System hibernates** list, then click the time you want to use.

- OR -

Open the *Power Options Properties* dialog box, then click the **Advanced** tab. Hibernate is now an option in the **Power buttons** lists.

- As a manually-selected power savings mode:

Click **Start**, then click **Shut Down**. Press and hold **SHIFT**, then click **Hibernate**.



CHAPTER 6

Traveling with Your Notebook

- Packing your notebook
- Traveling by air
- Dial-up modem
- Radio frequency wireless connections
- Files
- Security
- Power
- Additional tips

Packing your notebook

- Remove all peripheral devices and cables. Remember to pack those you will need while traveling.
- Pack your notebook securely into a briefcase or hand-carried luggage, and keep it separate from toiletries, liquids, and food. Do not pack it in checked luggage.
- Keep your notebook stable during travel. Secure it to prevent it from sliding around in overhead bins and car trunks.

Traveling by air

- Do not check your notebook as luggage.
- Charge the battery in case airport security asks you to start your notebook.
- Have your notebook hand-inspected or sent through the X-ray scanner, but never carry it through the metal detector.
- Turn off your notebook for takeoff and landing.
- Turn off all wireless devices while in the aircraft.

Dial-up modem

- Take a telephone cord to connect the modem to telephone jacks. If you are traveling internationally, take telephone jack adapters or an acoustic handset coupler.
- Take a telephone line protector.
- Take a telephone line tester to check for unsafe lines, especially if you are traveling internationally.
- Take remote access information with you so you can connect to your ISP while outside of your usual calling area. A list of country dialing codes may be especially useful if you are traveling internationally.

Radio frequency wireless connections



Important

If your notebook came equipped with an internal embedded wireless device, see [“Legal Information” on page 123](#) for general wireless regulatory guidelines.

- Every country has different restrictions on the use of wireless devices. If your notebook is equipped with a wireless device, check with the local radio approval authorities prior to your trip for any restrictions on the use of a wireless device in the destination country.
- Wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 and Bluetooth communication devices are examples of devices which use wireless to communicate.



Tip

For more information about turning your wireless device on or off, see [“Turning your wireless radio on or off” on page 39](#).

Files

- Copy your working files from your desktop computer to your notebook before you travel.
- If you need to access your desktop computer files from your notebook while traveling, set up your desktop computer for remote access. Contact your network administrator for more information about remote access.
- Take extra recordable media for transferring files between computers and backing up files.

Security

- Get a locking cable for your notebook so you can attach a cable lock and leave your notebook in your hotel room while you are away.
- Always keep your notebook with you while waiting in airports, train stations, or bus terminals. Be ready to claim your notebook as soon as it passes through the X-ray machine in security checkpoints.
- Write down your notebook model number and serial number (located on the bottom of your notebook) in case of theft or loss, and keep the information in a safe place. Also, tape your business card or an address label to your notebook and accessories.
- Whoever sits next to you or behind you can see your notebook display. Avoid working with confidential files until you can be sure of privacy.
- Use a startup password to restrict access to your notebook. The startup password is set using the BIOS utility.



Caution

Use a password that you can remember, but that is difficult for someone else to guess. The password feature is very secure, with no easy way to recover a forgotten password. If you forget your password, you must return your notebook to Gateway for service.

► To create a startup password:

- 1 Restart your notebook. As soon as you see a startup screen, press **F2**. The BIOS Setup utility opens.
- 2 Open the **Security** menu, highlight **Set Supervisor Password**, then press **ENTER** and follow the instructions. You must set the supervisor password in order to set the user (startup) password.



Important

You must enter the Supervisor Password each time you use the BIOS Setup utility.

- 3 Highlight **Set User Password**, then press **ENTER** and follow the instructions. This is the password you need to enter at startup.



Important

You must enter the User Password each time you turn on your notebook if it was turned off or put in hibernate mode. You do not need to enter the User Password if your notebook was put in Standby mode.

- 4 Highlight **Password on boot**, then press **ENTER**.
 - 5 Highlight **Enabled**, then press **ENTER**.
 - 6 Open the **Exit** menu, highlight **Exit Saving Changes**, then press **ENTER**.
 - 7 When you start your computer, you are prompted to enter the user password you set in [Step 3](#).
■
- Review the information in “Protecting your notebook” in your online *User Guide*.

Power

- Take your AC power adapter to recharge the battery. If you are traveling internationally, take power plug adapters.
- Take a portable surge protector to protect your notebook from power surges.
- To get the best performance from your notebook, avoid using the battery whenever possible, monitor the battery charge, and use the most efficient power management settings. For information on conserving battery power, using alternate power sources, and monitoring the battery charge, see [“Managing Power” on page 57](#).

Additional tips

- If you plan to use several USB peripheral devices, take a portable USB hub to provide additional USB ports.
- Take a network cable if you need to connect to a network. Some hotels provide Internet connectivity only through their networks.
- If your notebook has been exposed to cold temperatures, let it warm to room temperature before turning it on.
- Carry proof of ownership or a merchandise passport when traveling internationally.

- Consult your insurance company and credit card company to learn about emergency travel assistance if your notebook is lost or damaged.
- Take your recovery discs in case you need to install an additional driver or software.

CHAPTER 7

Maintaining Your Notebook

- Caring for your notebook
- Cleaning your notebook
- Maintaining the battery(ies)
- Cleaning CDs or DVDs

Caring for your notebook

To extend the life of your notebook:

- Be careful not to bump or drop your notebook, and do not put any objects on top of it. The case, although strong, is not made to support extra weight.
- When transporting your notebook, we recommend that you put it in a carrying case.
- Keep your notebook away from magnetic fields. Magnetic fields can erase data on hard drives.
- Never turn off your notebook when the drive indicator is on because data on the hard drive could be lost or corrupted.
- Avoid subjecting your notebook to extreme temperature changes. The case (and LCD panel) can become brittle and easy to break in cold temperatures and can melt or warp in high temperatures. Damage due to either extreme is not covered by your warranty. As a general rule, your notebook is safest at temperatures that are comfortable for you.
- Keep all liquids away from your notebook. When spilled onto notebook components, almost any liquid can result in expensive repairs that are not covered under a standard warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms and can lead to permanent damage to the notebook.
- Do not block the ventilation fan slots. If these slots are blocked, your notebook may overheat resulting in unexpected shutdown or permanent damage to the notebook.
- When storing your notebook for an extended period of time, unplug AC power and remove the battery(ies) after discharging them partway.

Cleaning your notebook

Keeping your notebook clean and the vents free from dust helps keep your notebook performing at its best. You may want to gather these items and put together a notebook cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Cotton swabs
- A DVD drive cleaning kit

Cleaning the exterior



Warning

When you shut down your notebook, the power turns off, but some electrical current still flows through your notebook. To avoid possible injury from electrical shock, unplug the power cord, modem cable, and network cable from the wall outlets and remove the main and optional secondary battery.

Always turn off your notebook and other peripherals before cleaning any components. Also, remove the main and optional secondary battery before cleaning any components.

Use a damp, lint-free cloth to clean your notebook and other parts of your system. Do not use household abrasive or solvent cleaners because they can damage the finish on components.

Your notebook is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your notebook turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your notebook with the exception of the memory bay.



Tip

You may want to occasionally open the memory bay door and remove dust and lint using an aerosol can of air.

Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your notebook and turn the notebook upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it. A replacement keyboard may not be covered by your warranty.

Cleaning the notebook screen



Caution

A notebook LCD screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

Use a soft cloth and water to clean the LCD screen. Squirt a little water on the cloth (never directly on the screen), and wipe the screen with the cloth.

Maintaining the battery(ies)

The life span of a notebook battery is about 1.5 to 3 years, under normal conditions. As the battery begins to die, you will have to recharge the battery more frequently because it cannot hold a full charge.

Do not expose the battery to high heat or freezing temperatures. Hot batteries discharge very quickly, and cold ones cannot create as much power. Short battery life is more likely to be caused by heat than by charge/discharge patterns. Keep your lithium-ion battery cool. Avoid a hot car, for example.

Charge often, but do not try to **fully** discharge the battery frequently. This only adds strain. Several partial discharges (regular use), with frequent recharges, are better for lithium-ion than one total discharge. Recharging a partially charged lithium-ion battery does not cause any harm because it has no “memory.”

Batteries with fuel gauges (notebooks) should be calibrated by applying a deliberate full discharge once every 30 charges. Running the battery down in the equipment does this. If ignored, the fuel gauge becomes increasingly less accurate and in some cases will cut off the device prematurely.

Using the right charger is important. By now you probably know that each kind of battery has its own technology, its own rate of charge, and so on. Charging lithium batteries correctly is one way to extend their life and to avoid damage.

Storing batteries

Do not charge up the battery, then store it away. A stored battery should be used every three to four weeks. Let the battery fully discharge, then recharge to 40% if you plan to store it again. If you store a battery for longer than three to four weeks, the battery could fully discharge because the battery circuitry itself consumes power.

If you have a spare lithium-ion battery, use one exclusively and keep the other cool by placing it in the refrigerator. Make sure that it is wrapped protectively and that nothing will be dropped on it. Do not freeze the battery.

Do not use old batteries. Avoid purchasing spare lithium-ion batteries and storing them for later use. Do not buy old stock, even if it is sold at clearance prices. While it makes sense to have 2 or 3 extra batteries, so that you always have a fresh one charged up and ready to go, if you buy batteries and store them for years, they may not work when you decide to use them.

Consider removing the battery from your notebook when running on fixed power. However, remember that when you have removed the battery from your notebook while using it with an electrical outlet, the automatic battery charger no longer keeps the battery charged.



Caution

When the battery is in the notebook and the notebook is running on AC power, the battery constantly charges, even though it has a full charge. This reduces the life of the battery. If the battery is fully charged and you want to run on AC power, remove the battery.

Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.



CHAPTER 8

Upgrading Your Notebook

- Preventing static electricity discharge
- Adding or replacing memory modules
- Replacing the hard drive kit

Preventing static electricity discharge



Warning

To avoid exposure to dangerous electrical voltages and moving parts, turn off your notebook, unplug the power cord, modem cable, and network cable, and remove the main and optional secondary batteries before opening the case.



Warning

To prevent risk of electric shock, do not insert any object into the vent holes of the notebook.



Important

Before installing or replacing components, you should read and understand the information in this section.

The components inside your notebook are extremely sensitive to static electricity, also known as *electrostatic discharge* (ESD).

Before installing or replacing components, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold components by their edges. Avoid touching the edge connectors. Never slide components over any surface.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your workbench or other grounded connection.
- Touch a bare metal surface on your workbench or other grounded object.

Adding or replacing memory modules



Important

Use only memory modules designed for your Gateway notebook.



Tools

You need a small Phillips screwdriver to replace memory modules.


Your notebook uses memory modules called SO-DIMMs (Small Outline Dual Inline Memory Modules). The modules are available in various capacities and any module can be placed in any slot.



► To add or replace memory modules:

- 1 Follow the guidelines under ["Preventing static electricity discharge" on page 84.](#)
- 2 Turn off your notebook.
- 3 Disconnect from the optional port replicator.
- 4 Disconnect the AC adapter, modem cable, and network cable, if they are connected to the notebook.
- 5 Disconnect all peripheral devices connected to the notebook and remove any PC cards.
- 6 Turn your notebook over so the bottom is facing up, then remove the main and optional secondary batteries. For more information, see ["Changing batteries" on page 59.](#)


- 7** Loosen the eight or nine (depending on model) memory bay cover screws (these screws cannot be removed).

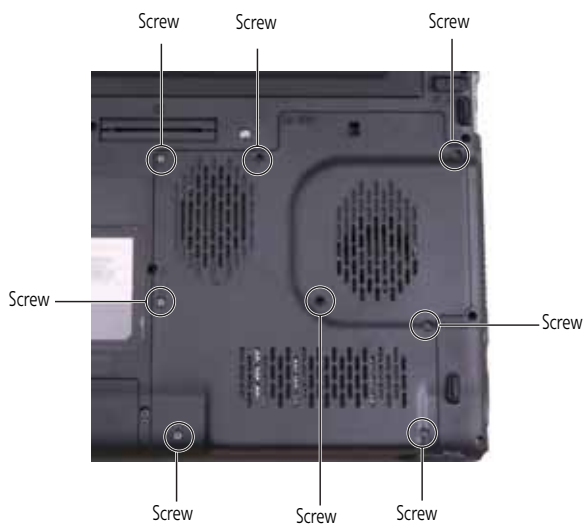


- 8** Lift the memory bay cover, then remove it.



- 9 If you are removing a module, gently press outward on the clip at each end of the memory module until the module tilts upward.

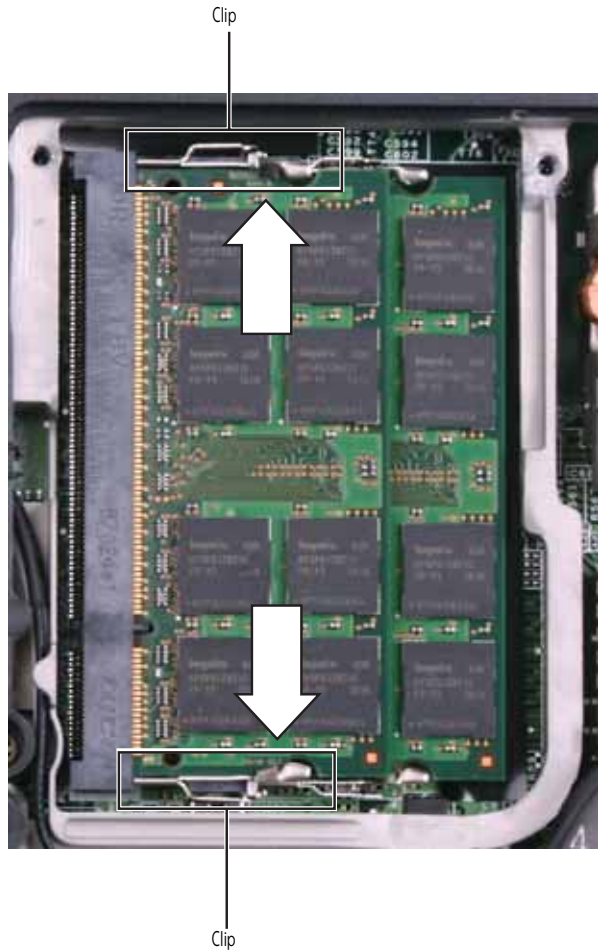

- 10 Pull the memory module out of the slot.

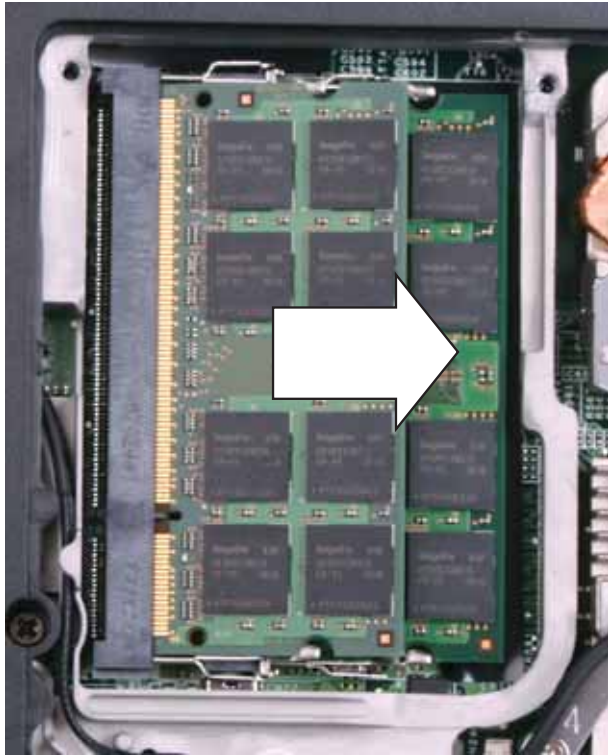

- 11 Hold the new or replacement module at a 30-degree angle and press it into the empty memory slot. This module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory bay.
 - 12 Replace the memory bay cover, then tighten the cover screws.
 - 13 Insert the main and optional secondary batteries, then turn your notebook over.
 - 14 Connect to the optional port replicator.
- OR-
- Connect the power adapter, modem cable, and network cable.
- 15 Reconnect all peripheral devices and replace any PC cards.



Replacing the hard drive kit



Tools

You need a small Phillips screwdriver and the Windows XP CD to replace the hard drive kit.

If you would like more hard drive capacity, you can replace your original drive with a higher-capacity drive.



► To replace the hard drive kit:

- 1 Create a *Drivers and Applications Recovery* disc. For more information, see "Creating Drivers and Applications Recovery discs" in your online *User Guide*.




Important

Your notebook may have shipped with a *Drivers and Applications Recovery* disc.

- 2 Print the "Recovering Your System" chapter from your online *User Guide* for use in [Step 24](#).
- 3 Back up any data you want to transfer to the new hard drive. For more information, see "Backing up files" in your online *User Guide*.
- 4 Follow the guidelines under "[Preventing static electricity discharge](#)" on [page 84](#).
- 5 Turn off your notebook.
- 6 Disconnect from the optional port replicator.
- 7 Disconnect the AC adapter, modem cable, and network cable, if they are connected to the notebook.


- 8 Disconnect all peripheral devices connected to the notebook and remove any PC cards.
- 9 Turn your notebook over so the bottom is facing up, then remove the main and optional secondary batteries. For more information, see ["Changing batteries" on page 59](#).
- 10 Loosen the 8 or 9 hard drive bay cover screws (these screws cannot be removed).

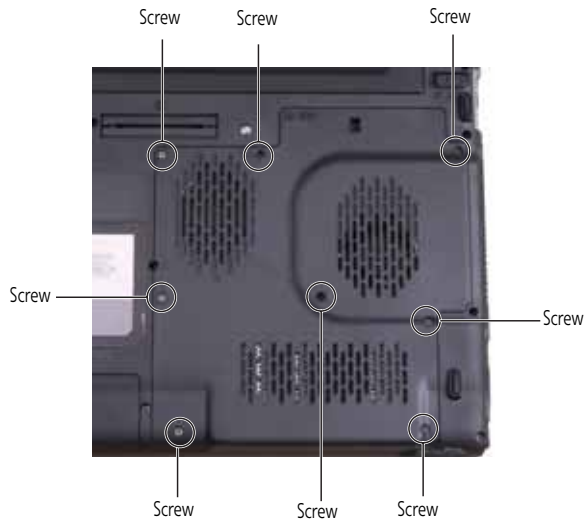


- 11 Lift the hard drive bay cover, then remove it.



- 12 Remove the two screws connecting the hard drive to the notebook.

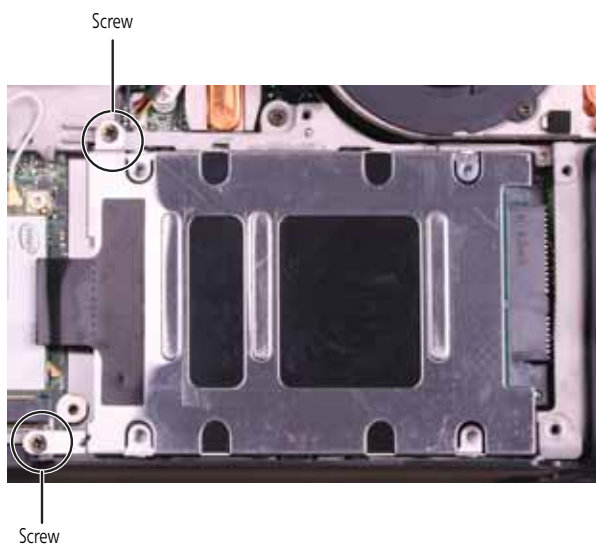

- 13 Using the plastic tab, slide the old hard drive, then remove it.

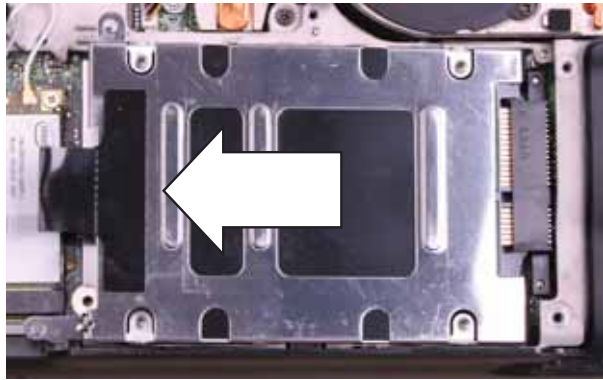

- 14 If your new hard drive already includes the hard drive bracket, go to [Step 19](#).

-OR-

If you need to move the hard drive bracket from your old hard drive to your new hard drive, go to [Step 15](#).

- 15 Remove the four screws that secure the hard drive to the hard drive bracket.



- 16** Remove the bracket from the old drive.



- 17** Place the new drive, label side up, onto the bracket so the screw holes line up.
- 18** Replace the screws that secure the bracket to the drive.
- 19** Slide the new hard drive kit into your notebook, then replace the screws that secure the hard drive kit to the notebook.
- 20** Replace the hard drive bay cover, then tighten the cover screws.
- 21** Insert the main and optional secondary batteries, then turn your notebook over.
- 22** Connect to the optional port replicator.
-OR-
Connect the power adapter, modem cable, and network cable
- 23** Turn on your notebook.
- 24** See the "Recovering Your System" chapter you printed in [Step 2](#) for instructions on installing Windows, your drivers, and your applications.
- 25** Reconnect all peripheral devices and replace any PC cards.



CHAPTER 9

Troubleshooting

- Safety guidelines
- First steps
- Troubleshooting
- Telephone support

Safety guidelines



Warning

Do not try to troubleshoot your problem if power cords or plugs are damaged, if your notebook was dropped, or if the case was damaged. Instead, unplug your notebook and contact a qualified computer technician.



Tip

For more information about preventing damage from static electricity, see [“Preventing static electricity discharge” on page 84](#).

While troubleshooting your notebook, follow these safety guidelines:

- Never remove the memory bay/hard drive bay cover while your notebook is turned on, while the battery(ies) are installed, and while the modem cable, network cable, and AC power adapter are connected to your notebook.
- Make sure that you are correctly grounded before accessing internal components.
- After you complete any maintenance tasks where you remove the memory bay/hard drive bay cover, make sure that you replace the cover, reinstall any screws, then replace the battery(ies) before you start your notebook.



Help

For more information about troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting** in the **Search** box, then press ENTER.

First steps

If you have problems with your notebook, try these things first:

- Make sure that the AC power adapter is connected to your notebook and an AC outlet and that the AC outlet is supplying power.
- Make sure that the power cord is firmly connected to the AC power adapter.
- If you use a power strip or surge protector, make sure that it is turned on.

- If the notebook will not turn on, try turning it on with the notebook plugged in and the main and optional secondary batteries removed, then try turning the notebook on with the notebook unplugged and the battery(ies) installed.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Customer Care in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

Troubleshooting

Troubleshooting topics are listed in alphabetical order.

Audio

Audio troubleshooting is covered under ["Sound" on page 120](#).

Battery

Battery troubleshooting is covered under ["Power" on page 118](#).

CD drives

CD drive troubleshooting is covered under ["DVD drives" on page 99](#).

Diskette drive (modular or external)

The diskette drive is not recognized

- Shut down and restart your notebook.
- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the diskette again.

You see an "Access Denied" or "Write protect" error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Not all diskettes are IBM-compatible. Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

You see a "Disk is full" error message

- Delete unnecessary files on the diskette.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. If errors are detected and corrected, try using the diskette again. For instructions on running Error checking, see "Checking the hard drive for errors" in your online *User Guide*.

You see a "Non-system disk," "NTLDR is missing," or "Disk error" error message

- Eject the diskette from the diskette drive, then press **ENTER**.
- Make sure that the diskette you are using is IBM-compatible.

The diskette drive status indicator is lit continuously

- Remove the diskette from the drive. If the indicator stays on, try restarting your notebook.

Display

The screen is too dark

- Adjust the brightness using the system keys. For more information about adjusting the brightness, see ["Adjusting the brightness" on page 38](#).

The screen resolution is not correct

- Change the screen resolution from the *Display Settings* dialog box. For instructions on changing the screen resolution, see “Adjusting the screen resolution” in your online *User Guide*.

The text on the display is dim or difficult to read

- Adjust the brightness using the system keys. For more information about adjusting the brightness, see [“Adjusting the brightness” on page 38](#).
- Change the display settings. For instructions on changing the display settings, see “Adjusting the screen and desktop settings” in your online *User Guide*.
- Move your notebook away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

The display has pixels that are always dark or too bright

- This condition is normal and inherent in the TFT technology used in active-matrix LCD screens. Gateway’s inspection standards keep these to a minimum. If you feel these pixels are unacceptably numerous or dense on your display, contact Gateway Customer Care to identify whether a repair or replacement is justified based on the number of pixels affected.

The display is blank

- Adjust the brightness using the system keys. For more information about adjusting the brightness, see [“Adjusting the brightness” on page 38](#).
- Make sure the notebook is not in Standby or Hibernate mode. Press the power button.
- The notebook may be sending its display to an external monitor or projector. Press **FN + F4** several times to toggle through the LCD panel, an external monitor or projector, or both.

DVD drives

Your notebook does not recognize a disc

- The disc may not be seated correctly in the tray. When you place a disc on the tray, make sure that you press the disc firmly onto the spindle so the retainers hold the disc in place.

- Make sure that the disc label is facing up, then try again.
- If you are trying to play a DVD, make sure that you have a DVD drive. For more information, see [“Identifying drive types” on page 45](#).
- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the disc again.
- Try a different disc. Occasionally discs are flawed and cannot be read by the drive.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Clean the disc. For more information, see [“Cleaning CDs or DVDs” on page 81](#).

An audio CD does not produce sound

- Make sure that the CD label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your notebook.
- Make sure that the volume control on your notebook is turned up. For more information about using your volume control, see [“Adjusting the volume” on page 38](#).
- Make sure that the Windows volume control is turned up. For instructions on how to adjust the volume control in Windows, see [“Adjusting the volume” in your online User Guide](#).
- Make sure that Mute controls are turned off.
- If you are using the built-in speakers, make sure that nothing is plugged into the headphone jack on the notebook. For the location of the headphone jack, see [“Front” on page 6](#).
- If you are using powered speakers, make sure that they are plugged in and turned on.
- Clean the disc. For more information, see [“Cleaning CDs or DVDs” on page 81](#).
- Your notebook may be experiencing some temporary memory problems. Shut down and restart your notebook.
- Reinstall the audio device drivers. For more information, see [“Gateway Web site” in your online User Guide](#).

A DVD movie will not play

- Make sure that the label or side you want to play is facing up, then try again.
- Make sure that you have a DVD drive. For more information, see [“Identifying drive types” on page 45](#).
- Shut down and restart your notebook.
- Clean the DVD. For more information, see [“Cleaning CDs or DVDs” on page 81](#).
- Make sure that the disc’s regional code and your DVD drive’s regional code match.
- Make sure that a DVD player program has been installed on your notebook.

A DVD does not produce sound on a television

- Audio is not transmitted through an S-Video or monitor jack. Use the built-in speakers, a set of headphones or external powered speakers, or connect your notebook to a stereo system to hear sound while playing a DVD.

You cannot eject a CD or DVD

- Your notebook must be turned on to remove CDs and DVDs. If you do not want to turn on your notebook, manually eject the disc by inserting an opened paper clip into the manual eject hole. For the location of the manual eject hole, see [“Using a CD or DVD” on page 46](#).

Ethernet

Ethernet troubleshooting is covered under [“Networks \(wired\)” on page 113](#).

File management

A file was accidentally deleted

- Recover the file from the Recycle Bin by following the instructions in [“Deleting files and folders”](#) in your online *User Guide*.



Caution

If a file was deleted while holding down the SHIFT key or if the Recycle Bin has been emptied, the file cannot be restored.



Help

For more information about restoring deleted files, click **Start**, then click **Help and Support**. Type the keyword **System Restore** in the **Search** box, then press ENTER.

Fingerprint reader

The fingerprint reader does not recognize your fingerprint

- Make sure that you are using the correct method for swiping your finger. For more information, see [“Running the TouchStrip Tutorial” on page 30](#).
- Make sure that you are using a finger that you have enrolled. For more information, see [“Enrolling your fingerprints” on page 31](#).
- For more information about troubleshooting the fingerprint reader, click **Start, All Programs, Protector Suite QL**, then click **Help**.

Hard drive

You see an “Insufficient disk space” error message

- Delete unnecessary files from the hard drive using Disk Cleanup. For instructions on deleting unnecessary files, see *“Deleting unnecessary files”* in your online *User Guide*.
- Empty the Recycle Bin by right-clicking the **Recycle Bin** icon, then clicking **Empty Recycle Bin**.



Caution

All deleted files will be lost when you empty the Recycle Bin.

- Save your files to another drive. If the hard drive is full, copy any files not regularly used to backup media, then delete them from the hard drive.



Help

For more information about file management, click **Start**, then click **Help and Support**. Type the keyword **file management** in the **Search** box, then press ENTER.

You see a “Data error” message

- This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program. For instructions on fixing hard drive problems, see *“Checking the hard drive for errors”* in your online *User Guide*.

The hard drive cannot be accessed, or you see a “General failure reading drive C” error message

- If a diskette is in the diskette drive, eject it and restart your notebook.
- Make sure that the hard drive is installed correctly. Remove it, firmly reinsert it, then restart your notebook. For more information about removing your hard drive, see [“Replacing the hard drive kit” on page 89](#).
- If your notebook has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

Your notebook does not recognize a second hard drive

- The modular drive may not be inserted completely into the modular bay. Press the module into the bay, then try to access the drive again.

Internet

You cannot connect to the Internet

- If you are using a dial-up modem, make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. For the location of your modem jack, see [“Right” on page 8](#).

-OR-

If you are using a cable or DSL modem, make sure that the modem cable is plugged into the Ethernet network jack and not the modem jack. For the location of your network jack, see [“Right” on page 8](#).

- Make sure that you do not have a problem with your modem. For more information, see [“Modem \(dial-up\)” on page 109](#).
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.



Help

For more information about troubleshooting Internet connections, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting connections** in the **Search** box, then press ENTER.

You see an “Unable to locate host” message and are unable to browse the Internet

- This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties. Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

Connecting to a Web site takes too long

Many factors can affect Internet performance:

- The condition of the telephone lines in your residence or at your local telephone service
- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your notebook

People are sending you e-mail messages, but you have not received any mail

- Click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

Keyboard

A keyboard character keeps repeating or you see a “Keyboard stuck” or “Key failure” error message

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your notebook.

You are pressing a letter key and a number appears on the screen

- The numeric keypad is turned on. For more information about using your keyboard, see [“Using the keyboard” on page 24](#).

An external keyboard does not work

- Make sure that the keyboard cable is plugged in correctly.
- Remove all extension cables and switchboxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- If you spilled liquid in the keyboard, turn off your notebook and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

Media Center

To view Media Center troubleshooting information that is not covered in this section, go to the Gateway support Web Site at www.gateway.com.

The Media Center video display looks bad on your TV

Many factors, such as the display type, quality of the video source, type of connection used, quality of video cables, display device screen resolution, size of TV, age of the TV, or the type of TV (interlaced or progressive scan), can affect the video quality significantly:

- **Display type**—The Media Center is best viewed on display devices that were offered with the Media Center computer when you purchased it from Gateway. Other types of display devices, including retail TVs, may provide lower quality video. If you did not order a display device when you purchased your Media Center computer, a progressive scan display device with a VGA input is the best choice.

- **Type of connection used**—You can connect the Media Center computer video output to a TV. However, the connection type has an affect on the video quality. The Media Center has two video outputs:
 - **VGA**—If your TV includes a VGA port, connect the VGA cable from the Media Center computer's VGA (monitor) port to the TV's VGA In port for the best quality. Many TVs do not have a VGA port.
 - **S-Video**—If your TV does not have a VGA port, but includes an S-Video port, connect the S-Video cable from the Media Center computer's S-Video Out port to the TV's S-Video In port. S-Video display quality is usually good for TV images. The display quality for the Media Center computer functions, however, is not as good as VGA output. S-Video display output is not optimized for computer video display.
- **Quality of video cables**—Poor quality or the incorrect type of video cables can cause problems and affect the video quality. Gateway recommends using high-quality video cables that can be purchased from Gateway.



Important

Cable connections must be made correctly for optimal video quality. A poor cable connection can lower video quality.

- **Screen resolution**—By default, the notebook uses a screen resolution optimized for the LCD screen. Many TVs cannot display this high of a resolution and may shift, scramble, or scroll the picture. For a better picture on a TV display, you may need to lower the Media Center screen resolution to 800 × 600 or 640 × 480. For more information about changing the screen resolution, see “Changing color depth and screen resolution” in your online *User Guide*.



Help

For more information about adjusting display settings, click **Start**, then click **Help and Support**. Type the keyword **changing display settings** in the **Search** box, then click the arrow.

- **Size of display device**—Small computer monitors for standard computer applications are generally not optimized for motion video playback. Although they offer excellent resolutions and refresh rates, they are designed to make static white backgrounds with black text look readable. Some small display devices do not make colorful motion video look its best. Generally, video will look better on a larger display device.

- **Age of the TV**—Newer TVs usually have more advanced features, produce a better quality picture, and support higher screen resolutions. The Media Center video display will likely be better on a newer model TV.
- **Type of TV** (interlaced or progressive scan)
Many TVs use interlaced video. Interlaced video displays a video frame with two passes of alternating scan lines. The TV screen first displays the video image odd lines one at a time, sequentially from top to bottom, then it fills in the other half of the video image with the even lines. Because most TVs use this interlaced method to display the picture on the screen, a standard interlaced analog TV will most likely flicker when displaying thin lines and small text. An interlaced video display device will produce a lower quality display, especially when viewing and using the Media Center computer functions.

Progressive scan video displays a video frame with one pass of sequential scan lines. A progressive scan TV displays the entire picture, drawn sequentially from top to bottom, without the odd/even interlacing. This results in a fuller, sharper picture and better display quality for viewing and using the Media Center computer functions. The progressive scan picture is also brighter and easier on your eyes.

You need to configure your Media Center to output to a TV

- Your Media Center computer detects whether you are using a VGA or an S-Video display device and automatically changes the display settings for the type of display device you are using. For more information, review the FAQ topic at www.gateway.com.

You want to change display settings to get better TV or DVD image quality

- Adjust the display device brightness, contrast, hue, and saturation. For more information review the FAQ topic at www.gateway.com.

You want to know whether you can burn videos that were recorded with your Media Center computer to a DVD

- Yes, you can. The Media Center saves recorded videos in the DVR-MS format. You can burn a DVR-MS file to a DVD with DVD recording (burning) software, such as Power2Go, and with the Media Center itself.

You want to know whether you can play recorded videos on other computers

- Yes, you can. A DVR-MS file recorded to DVD can be replayed on another Media Center computer or on a non-Media Center computer that has a DVD player and DVD decoder software (such as PowerDVD). The non-Media Center computer must also have Windows Vista or Windows XP with Service Pack (SP) 1 or 2, Windows Media Player 9 or later, and the Windows patch Q810243 Update.

You want to know whether you can play recorded videos on your home DVD player

- Yes, you can. DVDs recorded with the Media Center can be played on a home DVD player.

Memory

You see a “Memory error” message

- Make sure that the memory module is inserted correctly in the memory bay slot. For more information about installing memory, see [“Adding or replacing memory modules” on page 85](#).
- Use a third-party diagnostic program to help determine if a memory module is failing.

**Help**

For more information about troubleshooting memory errors, click **Start**, then click **Help and Support**. Type the keyword **memory error** in the **Search** box, then press ENTER.

You see a “Not enough memory” error message

- Close all programs, then restart your notebook.

Memory card reader

Drive letter for the memory card slot does not appear in the My Computer window

- Reboot your notebook.

Modem (cable or DSL)

The modem does not connect

- Make sure that the modem cable is plugged into the Ethernet network jack and not the modem jack. For the location of your network jack, see ["Right" on page 8](#).
- See the documentation that came with your modem for additional troubleshooting information.

Modem (dial-up)

Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. For the location of your modem jack, see ["Right" on page 8](#).
- Make sure that your notebook is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set appropriately.



Help

For more information about dialing properties, click **Start**, then click **Help and Support**. Type the keyword **dialing** in the **Search** box, then press **ENTER**.

► To check the dialing properties:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/double-click the **Phone and Modem Options** icon, then click the **Dialing Rules** tab.

3 Click the location from which you are dialing, then click **Edit**.

4 Make sure that all settings are correct.



- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service to fix the original line.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

You cannot connect to the Internet

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.
- Review the troubleshooting information under [“Internet” on page 103](#).

Your 56K modem does not connect at 56K

- Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your notebook has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your notebook has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem

- Current fax technology only supports a maximum send and receive rate of 14,400 bps.

The modem is not recognized by your notebook

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your notebook. For the location of your modem jack, see ["Right" on page 8](#).
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use a different modem cable. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your notebook.
- Run Windows modem diagnostics.

► To run modem diagnostics:

- 1** Close all open programs.
- 2** Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 3** Click/double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- 4** Click your modem, then click **Properties**. The *Modem Properties* dialog box opens.

- 5 Click the **Diagnostic** tab, then click **Query Modem**. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open or the modem has failed to respond*, the modem did not pass diagnostics.



Help

For more information about modem troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **modem troubleshooting** in the **Search** box, then press ENTER.



The modem is noisy when it dials and connects

- When your modem tries to connect to another modem, it begins *handshaking*. Handshaking is a digital “getting acquainted” conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.

► To turn down the modem volume:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- 3 Click the modem you want to adjust, then click **Properties**.
- 4 Click the **Modem** tab, then adjust the **Speaker volume** control.
- 5 Click **OK** twice to close the *Phone and Modem Options* dialog box.



Mouse

See also [“Touchpad” on page 121](#).

The external mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your notebook.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

The external mouse works erratically

- Clean the mouse.
- Some mouse pad patterns “confuse” optical mice. Try the mouse on a different surface.

Networks (wired)



Help

For more information about network troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **network troubleshooting** in the **Search** box, then press ENTER.

You cannot see the other computers on your wired Ethernet network

- Make sure that your Ethernet cable is plugged into the Ethernet jack on your notebook. Make sure that the other end is plugged into a router. For the location of your network jack, see [“Right” on page 8](#).
- Make sure that all computers are plugged into a powered electrical outlet and turned on.
- Make sure that the router is plugged into a powered electrical outlet and turned on. Most routers have lights that indicate they are working. For more information, see the documentation that came with your router.
- Make sure that all computers on your network have the same workgroup name.
- Make sure that all computers are using the same Subnet Mask.
- If you assigned IP addresses to the computers, make sure that all computers have different IP addresses. For home networks, IP addresses should be 192.168.N.N where N is a number you assign between 0 and 254. The first N should be the same for all computers on your network and the second N should be different for all computers on your network.

Your wired Ethernet network is running slower than you expect

- If your Ethernet network is running slower than you expect, check the speed of each Ethernet component. For best results, all Ethernet components should be standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100 Mbps), or Gigabit Ethernet (1000 Mbps or 10/100/1000 Mbps). A mixture of Ethernet, Fast Ethernet, and Gigabit Ethernet components will result in your network running at the slowest component speed.

You cannot connect to your company network

- Every network is unique. Contact your company computer department or network administrator for help.

Internet Explorer is unable to access the Internet

- Reset the power on your cable or DSL modem and your access point. This reestablishes communication between your Internet Service Provider and your modem and between your modem and your access point.
- If you previously accessed the Internet through a dial-up modem, Internet Explorer may not be set up to access the Internet through a network. Remove the dial-up connection in the Internet Options in Internet Explorer.

You cannot connect to your home network

- If your notebook is a member of a domain at your workplace, you may not be able to connect your notebook to your home network workgroup to access shared files or printers on your home network. You may, however, be able to access the Internet through your home network.

**Caution**

If your notebook was a member of a domain before you join a workgroup, it is disjoined from the domain and your computer account disabled. Contact your company computer department or network administrator for more information.

- Every home network is unique. See the documentation that came with your network equipment for troubleshooting information.

Networks (wireless)

You turned wireless networking on, but it takes a while to connect

- When wireless networking is turned on, it automatically scans for available connections. The scan can take approximately 30 seconds to complete.

Your connection on the network seems intermittent or your wireless network is running slower than you expect

- The speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, ceilings, floors, and doors.

If your wireless network is running slower than you expect, you should check your network signal strength. If you find the signal strength is low, try moving to a new location to increase the signal strength.



Important

Note any antenna placement constraints in the access point user guide because the speed of a wireless network is related to signal strength. Signal strength is affected by the distance between your wireless network devices, by radio interference, and by interference from natural obstructions such as walls, floors, and doors.

► To check the signal strength:

- 1 Click **Start**, right-click **My Network Places**, then click **Properties**. The *Network Connections* window opens.

- 2 Right-click **Wireless Network Connection**, then click **Status**. The *Wireless Network Connection Status* dialog box opens. The meter shows the signal strength for wireless networking on your computer if other computers with the same network name are within range of your computer.



■

You are in a wireless network, you can see the network, but cannot communicate, send files, print, or get to the Web

- If your access point uses WEP, go to the *Wireless Networking Properties* window and make sure that both the WAP and the WLAN in the computer have matching WEP keys.

You are in a wireless network, but no available networks are listed in the Connect to a network dialog box

- If the network you are attempting to access does not broadcast its SSID, you need to request the SSID from the administrator and add that network's information into the wireless utility.
- You may want to try entering **ANY** as the SSID, which will make the computer try to auto-detect the network.

Your wireless network is listed as a preferred network, but it has an "x" on it

- An **x** means your preferred network is not currently available or you are not currently in range to connect.

Internet Explorer is unable to access the Internet

- Reset the power on your cable or DSL modem and your access point. This reestablishes communication between your Internet Service Provider and your modem and between your modem and your access point.
- If you previously accessed the Internet through a dial-up modem, Internet Explorer may not be set up to access the Internet through a network. Remove the dial-up connection in the Internet Options in Internet Explorer.

You cannot see other computers on your network

- Your notebook may not have the same workgroup name as the other computers on your network. For more information, see “Naming your computers and workgroup” in your online *User Guide*.
- If your notebook was previously connected directly to your cable or DSL modem, and your ISP requires you to use a static IP address, your notebook is not set up to use a DHCP server. Modify the network properties so your notebook is set up for using a DHCP server.

You cannot connect to your network

- If your notebook is a member of a domain at your workplace, you may not be able to connect your notebook to your home network workgroup to access shared files or printers on your home network. You may, however, be able to access the Internet through your home network.



Caution

If your notebook was a member of a domain before you join a workgroup, it is disjoined from the domain and your computer account disabled. Contact your company computer department or network administrator for more information.

Passwords

Your notebook does not accept your password

Make sure that **CAPS LOCK** and **NUM LOCK** are turned off, then retype the password.

You forgot your startup password

The password feature (which is set in the BIOS Setup utility) is very secure, with no easy way to recover a forgotten password. You must return your notebook for repair. Call Gateway Customer Care for instructions.

PC Cards

You installed a PC Card and now your notebook is having problems

- Make sure that you have correctly installed required software for the PC Card. For more information, see your PC Card's documentation.

Power

Your notebook is not working on AC power

- Make sure that your AC power adapter is connected correctly to your notebook. For instructions on connecting the AC power adapter, see ["Connecting the AC adapter" on page 16](#).
- If your notebook is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the AC power adapter cables are free from cuts or damage. Replace any damaged cables.

Your notebook is not working on battery power

- Check the power management settings. For more information about using power management settings, see ["Changing notebook power settings" on page 64](#).
- Make sure that the main and optional secondary battery are installed correctly. For instructions on inserting your battery(ies), see ["Changing batteries" on page 59](#).
- Make sure that the battery(ies) are fully recharged. For more information about recharging the battery(ies), see ["Recharging the battery\(ies\)" on page 58](#).
- Make sure that the battery(ies) are calibrated correctly. For instructions on recalibrating your battery(ies), see ["Recalibrating the battery\(ies\)" on page 61](#).
- Let the battery(ies) return to room temperature.

Printer



Help

For more information about printer troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **printer troubleshooting** in the **Search** box, then press **ENTER**.

The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

The printer is on but will not print

- Check the cable between the printer and your notebook. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- If you are using a parallel port printer and the optional port replicator, check the port and cable for bent or broken pins.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.

► To set a default printer:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
 - 2 Click/double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
 - 3 Right-click the name of the printer you want to be the default printer, then click **Set as Default Printer**.
■
- Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

You see a "Printer queue is full" error message

- Make sure that the printer is not set to work offline.

► To make sure that the printer is not set to work offline:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.

- 3 Right-click the name of the printer you want to use. If the menu shows a check mark next to **Use Printer Offline**, click **Use Printer Offline** to clear the check mark.



- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

You see a “Printer is out of paper” error message

After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.

Sound



Help

For more information about troubleshooting sound issues, click **Start**, then click **Help and Support**. Type the keyword **sound troubleshooting** in the **Search** box, then press ENTER.

You are not getting sound from the built-in speakers

- Make sure that headphones are not plugged into the headphone jack.
- Make sure that the volume control on your notebook is turned up. For more information about using your volume control, see [“Adjusting the volume” on page 38](#).
- Make sure that the Windows volume control is turned up. For instructions on how to adjust the volume control in Windows, see “Adjusting the volume” in your online *User Guide*.
- Make sure that Mute controls are turned off.

Status indicators

The status indicators are not functioning

- Make sure the status indicators are turned on. Press **FN+F1** to toggle the indicators.

Touchpad

Touchpad is not working

- Make sure the touchpad is turned on. For more information, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

The notebook is not responding when you click or tap on the touchpad

- Turn on the touchpad. For instructions on how to adjust the touchpad settings, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

The pointer moves unexpectedly

- Clean the touchpad with a damp cloth (water only) and wipe it dry.
- Adjust the touchpad settings. For instructions on how to adjust the touchpad settings, see “Changing mouse, touchpad, or pointing device settings” in your online *User Guide*.

Video

The projector or external monitor is not working

- Make sure that you have pressed **FN+F4** to activate the external monitor option.
- Make sure that the monitor is turned on and that the video cable is connected correctly.

TV out is not working

- Make sure that you have activated TV out. For more information, see [“Viewing the display on a television” on page 53](#).
- Make sure that the television is turned on and that the S-Video cable is connected correctly.
- Televisions in different countries use different standards. If you are traveling, you may need to change the TV Out mode. For more information, see [“Viewing the display on a television” on page 53](#).

Telephone support

Before calling Gateway Customer Care

If you have a technical problem with your notebook, follow these recommendations before contacting Gateway Customer Care:

- Make sure that your notebook is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
 - Online Help
 - Printed documentation
 - The Microsoft Windows documentation
 - The software publisher's Web site
- See the troubleshooting section of this chapter.



Warning

To avoid bodily injury, do not attempt to troubleshoot your notebook problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your notebook
- Your notebook was dropped
- The case was damaged

Instead, unplug your notebook and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your notebook is nearby at the time of your call. The technician may have you follow troubleshooting steps.
- The label on the bottom of your notebook includes the Gateway Customer Care telephone number. For more information, see ["Gateway contact information" on page 3](#).

APPENDIX **A**

Legal Information

- Important safety information
- Regulatory compliance statements
- Environmental information
- Notices

Important safety information



Warning

Always follow these instructions to help guard against personal injury and damage to your Gateway system.



Warning

Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.



Warning

To reduce the risk of fire, use only No. 26 AWG or larger (for example, No. 24 AWG) UL-listed or CSA-certified telecommunication line cord for your dialup modem connection.

Your Gateway notebook is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this notebook, it is important that the safety instructions marked on the notebook and in the documentation are followed.

Setting up your system

- Read and follow all instructions marked on the notebook and in the documentation before you operate your notebook. Retain all safety and operating instructions for future use.
- Do not use this notebook near water or a heat source such as a radiator.
- Set up the notebook on a stable work surface.
- The notebook should be operated only from the type of power source indicated on the rating label.
- Openings in the notebook case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the notebook for ventilation when you set up your work area. Never insert objects of any kind into the notebook ventilation openings.
- Some notebooks are equipped with a three-wire power cord to make sure that the notebook is properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this notebook, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your notebook is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and buildup of static charges.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the notebook. The best way to avoid spills is to avoid eating and drinking near your notebook.
- Some notebooks have a replaceable CMOS battery on the system board. There is a danger of explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of batteries according to the manufacturer's instructions.
- When the notebook is turned off, a small amount of electrical current still flows through the notebook. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the notebook.

- Unplug the notebook from the wall outlet and refer servicing to qualified personnel if:
 - The power cord or plug is damaged.
 - Liquid has been spilled into the notebook.
 - The notebook does not operate properly when the operating instructions are followed.
 - The notebook was dropped or the cabinet is damaged.
 - The notebook performance changes.

Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

Regulatory compliance statements

Wireless guidance



Warning

Radio frequency wireless communication can interfere with equipment on commercial aircraft. Current aviation regulations require wireless devices to be turned off while traveling in an airplane. IEEE 802.11 (also known as wireless Ethernet or WiFi), wireless Internet, and Bluetooth communication devices are examples of devices that provide wireless communication.

Low power, Radio transmitting type devices (radio frequency (RF) wireless communication devices), may be present (embedded) in your notebook system. These devices may operate in the 2.4 GHz (i.e. 802.11b/g LAN & Bluetooth), 5.2 GHz (i.e. 802.11a LAN), and traditional cellular or PCS cellular bands (i.e. Cellular data modem). The following section is a general overview of considerations while operating a wireless device.



Warning

In environments where the risk of interference to other devices or services is harmful or perceived as harmful, the option to use a wireless device may be restricted or eliminated. Airports, Hospitals, and Oxygen or flammable gas laden atmospheres are limited examples where use of wireless devices may be restricted or eliminated. When in environments where you are uncertain of the sanction to use wireless devices, ask the applicable authority for authorization prior to use or turning on the wireless device.



Warning

If your notebook came equipped with an internal embedded wireless device, do not operate the wireless device unless all covers and shields are in place and the notebook is fully assembled.



Caution

Wireless devices are not user serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Please contact Gateway for service.

Additional limitations, cautions, and concerns for specific countries are listed in the specific country sections (or country group sections). The wireless devices in your system are only qualified for use in the countries identified by the Radio Approval Marks on the system rating label. If the country you will be using the wireless device in, is not listed, please contact your local Radio Approval agency for requirements. Wireless devices are closely regulated and use may not be allowed.

The power output of the wireless device or devices that may be embedded in your notebook is well below the RF exposure limits as known at this time. Because the wireless devices (which may be embedded into your notebook) emit less energy than is allowed in radio frequency safety standards and recommendations, Gateway believes these devices are safe for use. Regardless of the power levels, care should be taken to minimize human contact during normal operation.

Measurements have been performed to show that the RF exposure is below what is considered safe limits; however care should be taken to make sure the user or bystanders keep the transmitter away from their body when the wireless device is transmitting. The transmitting antenna installed in the top third of the lid should be used in a manner to maintain 8 inches (20 cm) from user's or bystander's bodies.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Some circumstances require restrictions on wireless devices.



Caution

Only use drivers approved for the country in which the device will be used. See the Gateway System Restoration Kit, or contact Gateway Customer Care for additional information.



Important

Every country has different restrictions on the use of wireless devices. Since your notebook is equipped with a wireless device, when traveling between countries with your notebook, check with the local Radio Approval authorities prior to any move or trip for any restrictions on the use of a wireless device in the destination country.

United States of America



Caution

Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.



Caution

The transmitting device embedded in this notebook may not be used with any antenna other than the one provided with the notebook.

Federal Communications Commission (FCC) Intentional emitter per FCC Part 15

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in the United States of America if an FCC ID number is on the system label.



Caution

In order to comply with FCC requirements this transmitter must not be operated (or co-located) in conjunction with any other transmitter or antenna installed in the notebook.

The FCC has set a general guideline of 8 inches (20 cm) separation between the device and the body, for use of a wireless device near the body (this does not include extremities). This device should be used more than 8 inches (20 cm) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by the FCC.

The wireless devices installed in this system are intended to be used indoors. In some areas, use of these devices outdoors is prohibited.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Compliance accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

FCC declaration of conformity



Caution

Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the notebook.



Caution

Recycle or dispose of the used notebook properly according to federal, state and local laws.

Responsible party:

Gateway, Inc.
7565 Irvine Center Drive
Irvine, CA 92618
Phone: 800-846-2000

Product:

- NA1
- QA1

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65 Warning



Warning

This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or reproductive harm.

Mercury Warning



Warning

The lamp in this display contains mercury. Do not put in trash. Recycle or dispose as hazardous waste

Telecommunications per Part 68 of the Code of Federal Regulations (CFR 47) (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Code of Federal Regulations (CFR 47) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

A telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

Canada

Industry Canada (IC) Intentional emitter per RSS 210



Caution

To prevent radio interference to licensed service or co-channel Mobile Satellite systems, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Low power, Radio transmitter type devices (radio frequency (RF) wireless communication devices), operating in the 2.4 GHz band and/or 5.15 – 5.35 GHz band, may be present (embedded) in your notebook system. This section is only applicable if these devices are present. Refer to the system label to verify the presence of wireless devices.

Wireless devices that may be in your system are only qualified for use in Canada if an Industry Canada ID number is on the system label.



Caution

Wireless devices are not user-serviceable. Do not modify them in any way. Modification to a wireless device will void the authorization to use it. Contact Gateway for service.



Caution

The transmitting device embedded in this notebook may not be used with any antenna other than provide with the notebook.



Caution

The 802.11A radio LAN your notebook may have been equipped with operates in the same frequency range as high power radar, which has priority use, and may damage the radio LAN if both are present and being used in the same area.

As a general guideline, a separation of 8 inches (20 cm) between the wireless device and the body, for use of a wireless device near the body (this does not include extremities) is typical. This device should be used more than 8 inches (20 cm) from the body when wireless devices are on. The power output of the wireless device (or devices), which may be embedded in your notebook, is well below the RF exposure limits as set by Industry Canada.

Operation of this device is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.



Warning

To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

The **Ringer Equivalence Number (REN)** assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Japan

本装置は、第二種情報装置（住宅地域またはその隣接した地域において使用されるべき情報装置）で住宅地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会（VCCI）基準に適合しております。

しかし、本装置をラジオ、テレビジョン受信機に、近接してご使用になると、受信障害の原因となることがあります。本書の説明にしたがって正しい取り扱いをしてください。

Japanese Modem Notice

本製品を日本で使用する場合は必ず日本国モードでご使用ください。他国のモードをご使用になると電気通信事業法（技術基準）に違反する行為となります。なお、ご購入時は初期値が日本国モードとなっておりますので、そのままご利用ください。

Laser safety statement



Warning

Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

EPA ENERGY STAR



As an ENERGY STAR® Partner, Gateway has determined that this product meets the ENERGY STAR guidelines for energy efficiency when used with a computer equipped with a Display Power Management System.

Environmental information

The product you have purchased contains extracted natural resources that have been used in the manufacturing process. This product may contain substances known to be hazardous to the environment or to human health.

To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, Gateway provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

Waste Electrical and Electronic Equipment (commonly known as WEEE) should never be disposed of in the municipal waste stream (residential garbage collection). The "Crossed-Out Waste Bin" label affixed to this product is your reminder to dispose of your "end of life" product properly.



Substances such as glass, plastics, and certain chemical compounds are highly recoverable, recyclable, and reusable. You can do your part for the environment by following these simple steps:

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional waste collection administration for recycling.
- In some cases, your "end of life" product may be "traded in" for credit towards the purchase of new Gateway equipment. Call Gateway to see if this program is available in your area.
- If you need further assistance in recycling, reusing, or trading in your "end of life" product, you may contact us at the Customer Care number listed in your product's user guide and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly.

With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

Notices

Copyright © 2007 Gateway, Inc.
All Rights Reserved
7565 Irvine Center Drive
Irvine, CA 92618 USA

All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at www.gateway.com. In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

Trademark Acknowledgments

Gateway and the Black-and-White Spot Design are trademarks or registered trademarks of Gateway, Inc. in the U.S. and other countries. Intel, Intel Inside logo, and Pentium are registered trademarks of Intel Corporation. Microsoft, MS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

Macrovision statement

If your notebook has a DVD drive and an analog TV Out port, the following paragraph applies:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A

- AC adapter
 - connecting 16
 - connector 9
 - international adapters 63
- accessories
 - purchasing 54
 - safety precautions 125
- acoustic handset coupler 72
- airplane power adapters 54
- alarms 66
- application key 25
- arrow keys 25
- audio
 - adjusting volume 28, 38
 - back button 27
 - headphone jack 7
 - microphone jack 6
 - muting 28, 38
 - next button 27
 - pause button 27
 - play button 27
 - stop button 27
 - troubleshooting 120
 - volume down button 28
 - volume up button 28
- audio CD
 - cleaning 81
 - inserting 46
- automobile power adapter 54, 63

B

- battery
 - alternate power sources 63
 - bay 59
 - calibrating 80
 - changing 59
 - changing secondary 42
 - charge indicator 6, 58
 - charge status 58
 - charging 16, 58
 - conserving power 62
 - extending life 80
 - fuel gauges 80
 - icons 58
 - installing main 59
 - installing multibay 60
 - latch 10
 - life span 80
 - locating 10
 - managing power 62
 - maximizing performance 62
 - monitoring charge 58
 - multibay 60
 - purchasing 55
 - recalibrating 61
 - recharging 16, 58
 - release latch 10
 - replacing 59
 - secondary 9
 - storing 81
 - troubleshooting 118
- battery alarm options 66
- bays
 - battery 59
 - DVD drive 42
 - DVD/CD-RW drive 42
 - hard drive 10
 - memory 10, 85
 - modular 9, 42
 - multibay battery 60
- BIOS Setup utility 61
- Bluetooth
 - system key 27
 - turning off 27, 40
 - turning on 27, 40
- brightness
 - adjusting 27, 28, 38
 - system keys 28
- broadband modem
 - connecting 20

buttons
Hotkey 11

C

cable lock 7
cable modem 9, 20
 connecting 20
 troubleshooting 109
camera
 See digital camera
 See digital video camera
Caps Lock indicator 23
cards
 inserting memory card 47
 inserting PC Card 48
 memory card slot 8
 memory cards supported
 47
 PC Card slot 8
 removing memory card 47
 removing PC Card 48
 slots 47, 48
 smart card slot 8
 troubleshooting memory
 card 108
 troubleshooting PC Card
 118
carrying case 55
CD
 cleaning 81
 controlling playback 27
 eject button 46
 inserting 46
 manual eject hole 46
CD drive
 See DVD drive
cellular phone
 memory cards 47
Certificate of Authenticity 3
changing
 battery 58
 bay modules 42
cleaning
 audio CD 81
 case 79

CD 81
DVD 81
keyboard 79
LCD panel 80
notebook exterior 79
screen 80

clicking 37
closing unresponsive program
 22

connecting
 AC adapter 16
 cable modem 20
 dial-up modem 19
 DSL modem 20
 external keyboard 24
 external monitor 52
 IEEE 1394 device 51
 keyboard 24
 mouse 37
 printer 50
 projector 52
 scanner 50
 television 53
 to wired Ethernet 20
 USB device 50
 video camera 51

connections
 audio 6
 broadband Internet 9, 20
 cable modem 9, 20
 camcorder 8
 dial-up modem 9, 19
 digital camera 7, 8
 digital video camera 8, 50
 docking 10
 DSL modem 9, 20
 Ethernet 9
 external audio 6
 external diskette drive 7, 8,
 50
 external speakers 7
 Firewire 8, 50
 flash drive 7, 8, 50
 headphone 7
 i.Link 8, 50
 IEEE 1394 8, 50
 keyboard 7, 8

- microphone 6
 - modem (dial-up) 9
 - monitor (VGA) 7, 52
 - mouse 7, 8
 - MP3 player 8
 - network 9
 - port replicator 10
 - power 9, 16
 - printer 7, 8
 - projector 52
 - scanner 7, 8
 - speaker 7
 - S-Video (TV) out 9, 54
 - television 53
 - USB 7, 8, 50
 - VGA 7, 52
 - video camera 8
 - wired Ethernet 20
 - wired network 20
 - copyright notice 132
- D**
- default printer 119
 - dialing codes 72
 - dial-up modem 9, 19
 - adjusting volume 112
 - diagnostics 111
 - dialing properties 109
 - troubleshooting 109
 - using while traveling 72
 - digital camera
 - memory card reader 8, 47
 - USB port 7, 8
 - digital video 50
 - digital video camera
 - connecting 51
 - IEEE 1394 port 8
 - directional keys 25
 - diskette
 - troubleshooting 98
 - diskette drive
 - locating 9
 - status indicator 24
 - troubleshooting 98
 - display
 - brightness 38
 - properties 52
 - switching 26
 - troubleshooting 98
 - docking port 10
 - documentation
 - User Guide 2
 - double-clicking 37
 - dragging 38
 - drives
 - CD 45
 - changing modular drives 42
 - diskette 9
 - DVD 9, 45
 - DVD/CD-RW 9, 45
 - DVD±RW 42, 45, 55
 - hard drive 9, 10, 89
 - identifying drive types 45
 - installing and replacing 42
 - multi-format DVD±RW 45
 - replacing hard drive 89
 - second hard drive 9
 - status indicators 24
 - troubleshooting 98, 99, 102
 - types 45
 - DSL modem 9, 20
 - connecting 20
 - troubleshooting 109
 - DVD
 - cleaning 81
 - controlling playback 27
 - eject button 46
 - inserting 46
 - manual eject hole 46
 - playing 53
 - regional code 46
 - troubleshooting 99
 - DVD drive
 - identifying 45
 - locating 9
 - modular drive status
 - indicator 24
 - replacing drive module 42
 - troubleshooting 99
 - using 45
 - DVD/CD-RW drive

See DVD drive
 DVD±RW drive
 See DVD drive
 DVI port 26, 50, 52

E

eject button
 CD 46
 DVD 46
 eject hole
 CD 46
 DVD 46
 electrostatic discharge (ESD) 84
 EmPower power adapter 63
 ergonomics 14
 Ethernet
 connecting wired 20
 jack 9, 20
 external monitor 7, 26
 EZ Pad touchpad
 See touchpad

F

fan 7
 faxes
 troubleshooting 111
 files
 opening 37
 transferring 73
 troubleshooting 101
 fingerprint
 enrolling 31
 fingerprint reader
 control center 33
 locating 12
 troubleshooting 102
 tutorial 30
 using 30
 Firewire port 8, 50
 Fn key 25, 26
 folders
 opening 37
 function keys 25

G

Gateway
 contact information 3
 model number 3
 serial number 3
 Support 4

H

hard drive
 bay 10
 indicator 24
 installing 42, 55, 89
 purchasing 55
 replacing 89
 second hard drive 9, 42, 55
 troubleshooting 102
 headphone jack 7
 Hibernate mode 63, 68
 Hotkey
 button 11
 hot-swapping 48, 50

I

i.Link port 8, 50
 IEEE 1394
 connecting device 51
 port 50
 IEEE 1394 port 8
 IEEE 802.11
 using while traveling 73
 indicators
 See status indicators
 inkjet printer 55
 installing
 battery 59, 60
 bay modules 42
 CD drive 42, 55
 devices 50
 digital camera 50
 digital video camera 50
 diskette drive 42, 55
 drives 42
 DVD drive 42, 55
 hard drive 89
 memory 85

- multibay battery 60
- PC Card 48
- peripheral devices 50
- printer 50
- scanner 50
- second hard drive 42, 55
- secondary battery 42, 55, 60

- Internet
 - troubleshooting 103

J

- jacks
 - See connections

K

- Kensington cable lock 74
 - lock slot 7

- key combinations 26

- keyboard
 - buttons 24
 - cleaning 79
 - connecting 24
 - features 24
 - keys 24
 - locating 11
 - troubleshooting 104
 - USB port 7, 8

- keys
 - application 25
 - arrow 25
 - brightness 28
 - directional 25
 - Fn 25, 26
 - function 25
 - LCD brightness 28
 - LCD/CRT 26
 - navigation 25
 - numeric keypad 25
 - Standby 26
 - system 25
 - system key combinations 26
 - toggle display 26
 - Windows 25
 - wireless Ethernet 26

L

- labels
 - Customer Care 10
 - Microsoft Certificate of Authenticity 3
 - model number 3
 - serial number 3

- laser printer 55

- latch
 - battery 10
 - LCD panel release 6
 - module 10

- LCD panel
 - cleaning 80
 - release latch 6
 - switching display 26
 - troubleshooting 98

- LCD/CRT system key 26

- line protector 72

- line tester 72

- lock
 - cable 74
 - Kensington cable 7

M

- maintenance
 - cleaning 79, 81

- Media Center
 - troubleshooting 105

- media reader
 - See memory card reader

- memory
 - bay 10
 - installing 85
 - purchasing 55
 - removing 85
 - replacing 85
 - troubleshooting 108

- memory card reader
 - inserting card 47
 - locating 8
 - memory cards supported 47
 - removing card 48
 - troubleshooting 108

- using 47
- microphone
 - built-in 11
 - jack 6
- Microsoft Certificate of Authenticity 3
- model number 3, 74
- modem
 - cable 9, 20
 - connecting 19, 20
 - dial-up 19, 72
 - DSL 9, 20
 - international adapter 72
 - jack (dial-up) 9, 19
 - troubleshooting 109
- modular bay 42
- modular drive indicator 24
- module
 - latch 10
 - release latch 10
- modules
 - changing 42
 - purchasing 55
- monitor
 - adding external 52
 - color quality 52
 - display properties 52
 - port 7
 - screen resolution 52
 - troubleshooting external 121
 - using 26
- mouse
 - connecting 37
 - troubleshooting 112
 - USB port 7, 8
- moving
 - pointer 37
 - screen objects 38
- MP3 player
 - memory cards 47
- multimedia
 - adjusting volume 38
 - using DVD drive 45
- mute button 28

- muting sound 28, 38

N

- navigation keys 25
- network
 - troubleshooting 113, 115
- network jack 9, 20
- networking
 - turning off Bluetooth 40
 - turning off wireless Ethernet 39
 - turning on Bluetooth 40
 - turning on wireless Ethernet 39
- NTSC/PAL jack 53
- Num Lock
 - status indicator 23
 - system key 25
- numeric keypad
 - status indicator 23
 - using 25

O

- opening
 - files 37
 - folders 37
 - LCD panel 6
 - notebook 6
 - programs 37
 - shortcut menu 38
- option bays
 - changing modules 42

P

- packing notebook 72
- password 74, 117
 - startup 74
 - supervisor 74
 - user 74
- PC Card
 - adding 48
 - eject button 48
 - inserting 48
 - installing 48
 - removing 48

- slot 48
 - troubleshooting 118
 - PC Card slot 8
 - PCMCIA card
 - See PC Card
 - PDA
 - memory cards 47
 - peripheral devices 50
 - Plug and Play devices
 - IEEE 1394 support for 50
 - USB support for 50
 - pointer
 - identifying 36
 - moving 37
 - port replicator
 - docking port 10
 - using 55
 - ports
 - See connections
 - power
 - AC adapter 16, 63
 - advanced settings 64, 67
 - alarms 66
 - alternate sources 63
 - automobile/airplane
 - adapter 63
 - battery 58, 59, 61, 62
 - button 11, 26
 - changing modes 64
 - changing schemes 65
 - connector 9, 16
 - conserving battery power 62
 - EmPower adapter 63
 - extending battery life 62
 - Hibernate mode 63, 68
 - indicator 6, 22
 - international adapter 75
 - management 57, 62
 - plans 64
 - schemes 65
 - source problems 18
 - SpeedStep settings 65
 - Standby mode 22, 26, 63
 - status indicator 6
 - surge protector 18
 - troubleshooting 118
 - turning off notebook 22
 - turning on notebook 20
 - power adapters
 - airplane 54
 - automobile 54
 - printer
 - default 119
 - inkjet 55
 - installing 50
 - laser 55
 - troubleshooting 118
 - USB port 7, 8
 - privacy filter 35, 56
 - programs
 - closing unresponsive 22
 - opening 37
 - projector
 - adding 52
 - color quality 52
 - display properties 52
 - port 7
 - screen resolution 52
 - troubleshooting 121
 - using 26
- ## R
- radio approval authorities 73
 - radio frequency wireless
 - connections 73
 - RAM
 - See memory
 - rebooting notebook 22
 - recalibrating battery 61
 - recharging battery 58
 - Recycle Bin
 - deleting files 102
 - emptying 102
 - regional code
 - DVD 46
 - replacing
 - See installing
 - resetting notebook 22
 - restarting notebook 22

right-clicking 38

S

S/PDIF jack 50

safety

avoiding repetitive strain 15

caring for notebook 78

general precautions 124

guidelines for

troubleshooting 96

posture 15

reducing eye strain 14

setting up computer 15

sitting at computer 15

static electricity 84

scanner

installing 50

USB port 7, 8

screen

resolution 52

troubleshooting 98, 121

screen objects

getting information 38

moving 38

selecting 37

scroll zone 36

security

startup password 74

while travelling 74

security features

Kensington cable lock 7

serial number 3, 74

setting up

safety precautions 124

shipping notebook 72

shortcut menus

accessing 38

shortcuts

opening menu 38

shutting down notebook 22

smart card reader

locating 8

SO-DIMM

See memory

sound

adjusting 28, 38

controls 38

muting 28, 38

troubleshooting 120

speakers

built-in 6

jack 7

SpeedStep technology 65

Standby

mode 22, 26, 64

system key 26

starting

notebook 20

programs 37

startup password 74

static electricity 84

status indicator

wireless Ethernet 23

status indicators

battery charge 6, 58

Caps Lock 23

CD drive 24

diskette drive 24

drive activity 24

DVD drive 24

hard drive 24

location 11

modular drive 24

numeric keypad 23

Pad Lock 23

power 6

toggle on or off 26, 120

troubleshooting 120

supervisor password 74

surge protector 18

Suspend 26

S-Video (TV) out jack 9, 54

switch

wireless network 6

system identification label 3

system keys

combinations 26

locating 25

T

technical support

Support 4

tips before contacting 122

telephone

acoustic handset coupler 72

line protector 72

line tester 72

telephone support 122

television

playing DVD on 53

S-Video out jack 9

TV out jack 53

viewing display on 53

touchpad

buttons 36, 37

clicking 37

double-clicking 37

dragging screen objects 38

locating 12

moving pointer 36, 37

moving screen objects 38

opening files, folders, and
programs 37

opening shortcut menu 38

right-clicking 38

scroll zone 36

selecting screen objects 37

troubleshooting 121

travel tips 71

troubleshooting

audio 120

battery 118

diskette drive 98

display 98

DVD drive 99

external monitor 121

faxes 111

files 101

general guidelines 96

hard drive 102

Internet connection 103,
110

keyboard 104

LCD panel 98

Media Center 105

memory 108

memory card reader 108

modem 109

mouse 112

network 113, 115

passwords 117

PC Cards 118

power 118

printer 118

projector 121

safety guidelines 96

screen 98, 121

screen area 98

screen resolution 98

sound 120

status indicators 120

technical support 122

telephone support 122

touchpad 121

video 121

Web site connection speed
104

wired Ethernet 113

wireless Ethernet 115

wireless network 115

turning off

Bluetooth 27

notebook 22

wireless Ethernet 39

wireless network 6, 27

turning on

Bluetooth 27

notebook 20

wireless Ethernet 26

wireless network 6, 26, 39

TV out (S-Video out) jack 9, 53

U

upgrading 83

USB

connecting device 50

port 50

USB port 7, 8

user password 74

V

- ventilation 7
- VGA port 7, 52
- video
 - monitor port 7
 - projector port 7
 - S-Video out jack 9
 - troubleshooting 121
 - VGA port 7
- video camera
 - connecting 51
- volume
 - adjusting 28, 38
 - adjusting modem 112
 - controls 38
 - muting 28, 38
 - system keys 28
 - troubleshooting 120

W

- waking up notebook 22
- weightsaver 9, 42, 55
- Windows
 - key 25
 - Product Key Code 3
- wired Ethernet
 - troubleshooting 113
- wireless Ethernet
 - button 26
 - status indicator 23
 - troubleshooting 115
 - turning off 39
 - turning on 39
 - using while traveling 73
- wireless network
 - switch 6
 - troubleshooting 115
- working safely 14

MAN PHTM/ORION HW REF GDE XP R1 4/07



8512375